



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

PRO-YD-AI94-HL and PRO-YD-AI98-HL (ALL COLORS)

Tools Required

10mm Socket wrench/ratchet

Phillips screw driver

Please Note


If you are unfamiliar with the installation processes, professional installation is highly recommended.




1) First you will need to start by removing the corner bumper lights. Use the screw driver to unscrew the screw from its mount hole. Remove the bumper light and twist of the sockets lights. Set the light aside.




2) Next, you will have to remove the (4) 10mm bolts one on top and another on the side. Next remove the (9) screws on the grill area that hold down the mount plat and bumper.

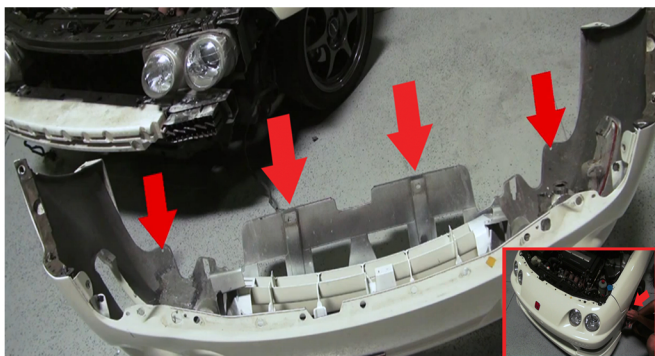


3) Before the bumper can be fully removed you will need to take off the (4) 10mm bolts that hold the splash plate and bumper to the bottom of the frame. Once these have been removed there will be (1) 10mm bolt on both sides of the bumper that hold it to the fender. Now, you can remove the bumper.

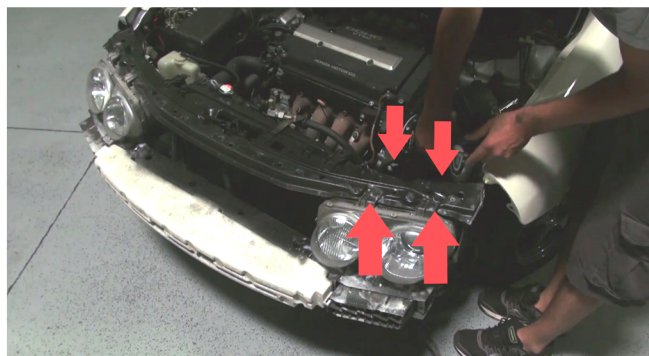


4) Now to remove the head lights. there will be (2) 10mm bolts behind the head light and (9) 10mm bolts on the top. Remove these and set them aside with the others. Untwist the Hi and Low beam bulbs from your OE head lights, set the head light aside.

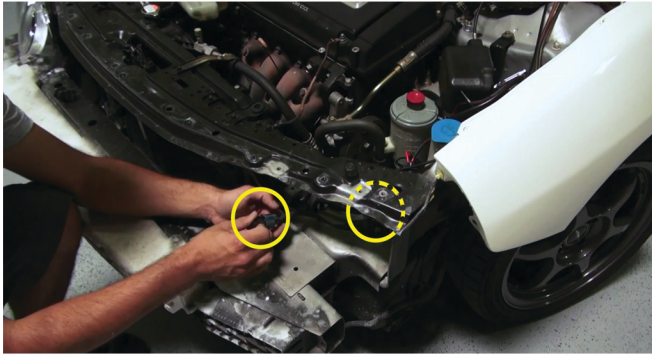


5) After the head lights have been removed, gently remove the inner hi-beam bulb from its sockets shown by the solid circle. Leave the low-beam bulbs in their sockets shown by the dotted circle.

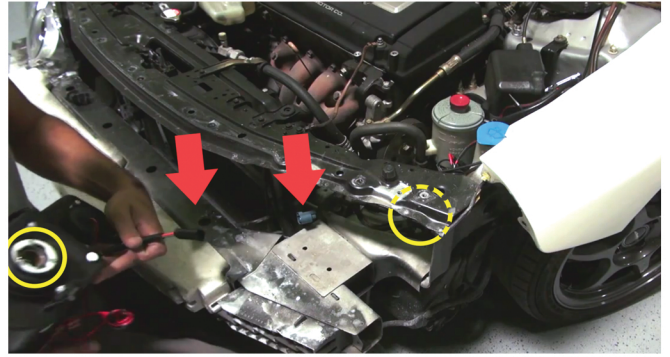

6) Take your new Spyder lights and plug in the Hi-beam harness into the hi-beam socket of the lights. Next take the low-beam bulbs and simply seat them in the head light and twist them counter-clockwise to secure them tight. doing this properly prevents condensation in the head lights.

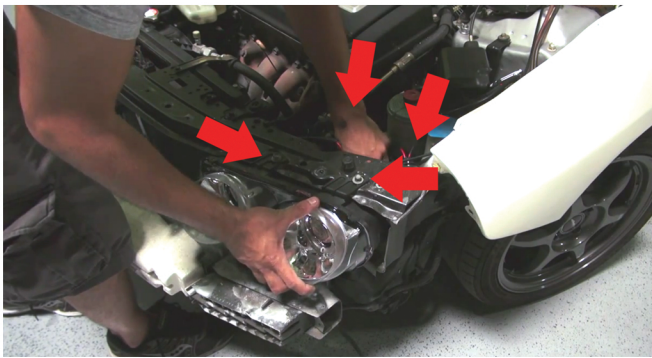

7) Now it is time to seat the new lights. Seat them by lining up the mount holes to the bolts holes on the vehicle. Using your existing (4) 10mm bolts bolt the head light down.

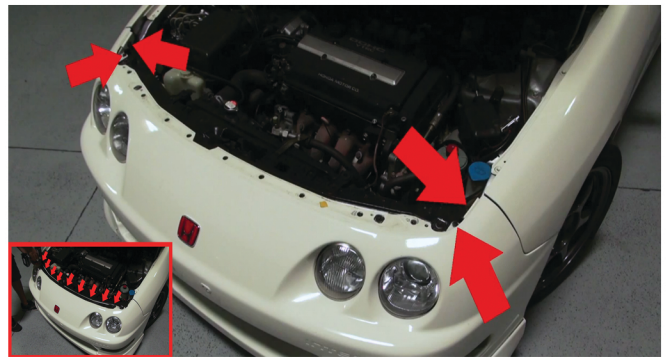

8) Next, seat the bumper, lining up the mount holes with their bolt holes. Replace the (4) 10mm bolts, one on top and another on the side to both sides. Next replace the (9) screws on the grill area to bolt down the mount plat and bumper.



9) Finally replace the (4) 10mm bolts on the bottom of the bumper and the (1) 10mm bolt to secure the bumper to the fender on both sides. Replace the corner bumper lights placing the bumper light harnesses and bulbs into their sockets, twist the sockets lights tightly. Use the screw driver to screw the screws back in the



Congratulations on completing the installation for your new Spyder head lights for the 1994-2001 Acura Integra



Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.