



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: PRO-YD-FF15097-1P-(ALL COLORS)

### Tools Required

Flathead Screwdriver



**\*Please Note\***

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the hood. Remove the flathead screw securing the corner lamp.




2) Pry out the corner lamp, then remove the turn signal socket and remove the corner lamp assembly and set it aside.



3) Pull the two headlight retainer tabs UP to release the headlight.



4) Unseat the headlight by pulling it forward, then remove the headlight socket. Then set the headlight aside.

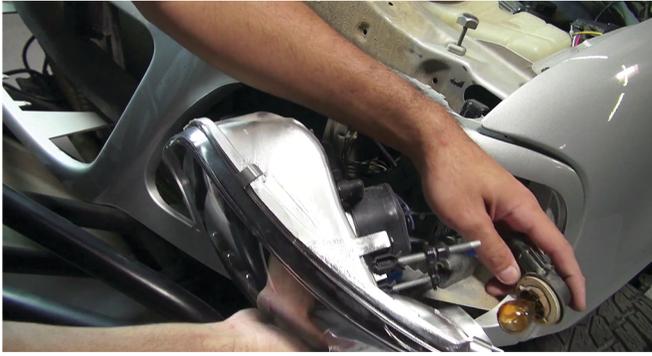

5) Locate your SPYDER headlight. Install the headlight bulb/socket and the turn signal bulb/socket.



6) Seat the SPYDER headlight.



7) Push down on the two headlight retainer tabs.



8) Enjoy your new SPYDER headlights.



**SPYDER**  
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.  
<http://www.youtube.com/watch?v=uCLf11TMKSI>

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.