



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE:

PRO-YD-FM05-(ALL COLORS)

### Tools Required

5.5mm & 10mm Socket & Ratchet  
Panel Popper  
Phillips Drivers

*\*Please Note\**

If you are unfamiliar with the installation processes,  
professional installation is highly recommended.



1) Open the hood.



2) Remove [6x] plastic retainers securing the filler panel.




3) Remove filler panel.



4) Remove [2x] 10mm bolts securing the fascia on either side of the grille.




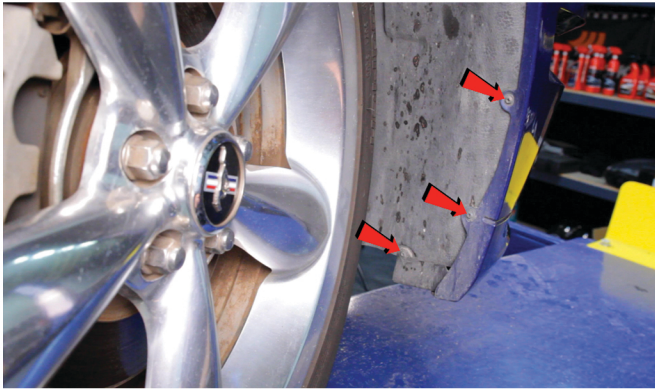

5) Remove [3x] phillips screws securing the fender liner.



6) Remove [2x] 10mm bolts securing the fascia to the fender.

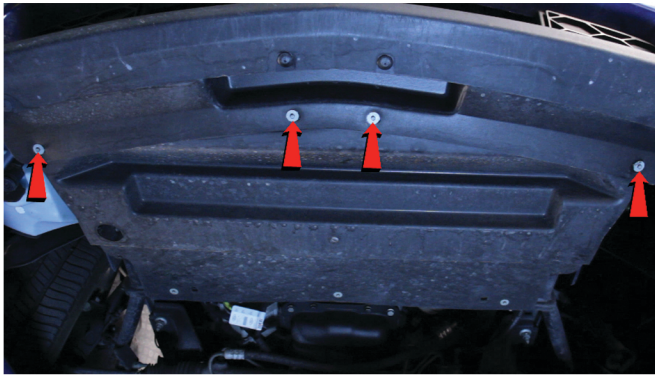

7) Remove [4x] 5.5mm bolts securing the fascia to the undertray.



8) Pull down on the corner of the fascia to unseat it from the fender stud.



9) Release the mounting tabs on either side of the grille, then you can unseat the fascia.




10) Disconnect the turn signal socket.






11) Disconnect the foglight harness, then you can remove the fascia and set it aside.

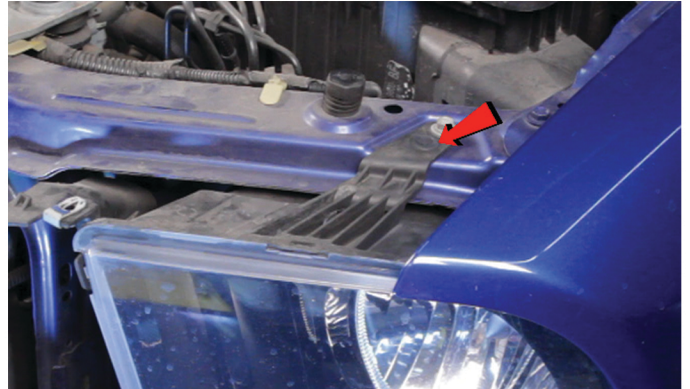

12) Remove [1x] plastic retainer securing the headlight.

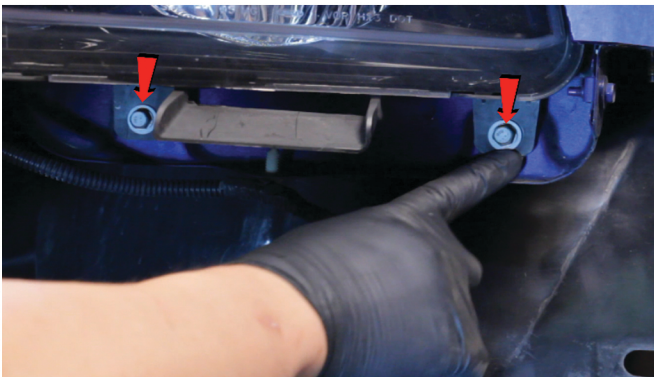

13) Remove [2x] 10mm bolts securing the headlight from below.



14) Support the headlight as you remove the final [1x] 10mm bolt securing the headlight to avoid dropping the headlight.




15) Unseat the headlight.



16) Disconnect the headlight wiring harness, then remove the headlight and set it aside.



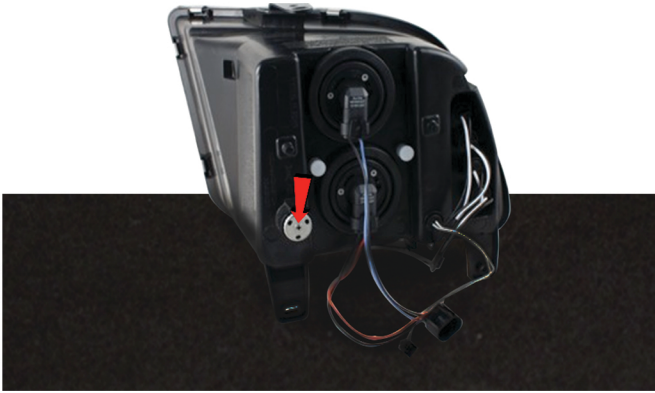

17) Your headlight beam adjuster is shown here and is phillips head. For information on wiring the Halos, see “How To Wire Halos” on the Spyder FAQs playlist on the Spyder Auto YouTube channel.




18) Connect the headlight harness to the Spyder headlight.



19) Seat the Spyder headlight.



20) Reinstall [1x] 10mm bolt.

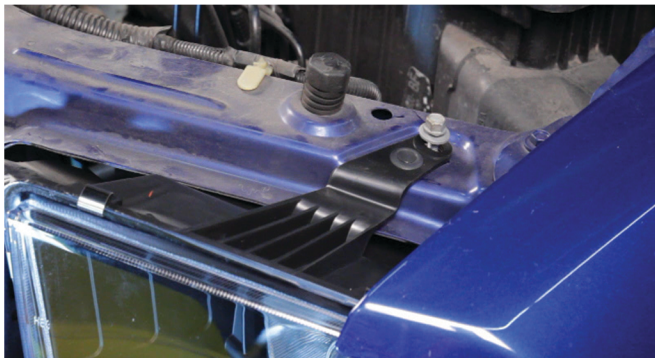

21) Reinstall [1x] plastic retainer to secure the headlight.




22) Reinstall [2x] 10mm bolts securing the headlight from below.






23) Reconnect turn signal harness.

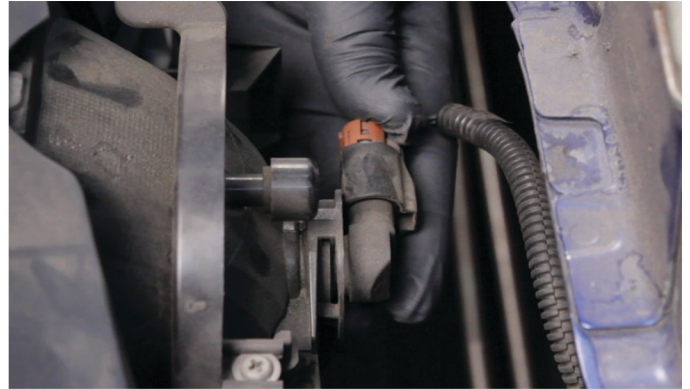

24) Reconnect the fog light wiring harness.

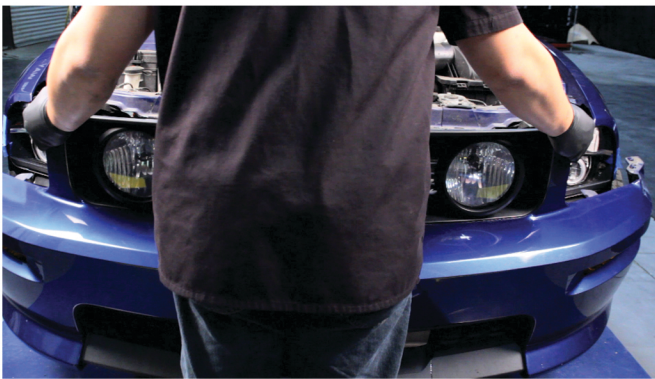

25) Seat the front bumper fascia, being sure to seat the retainer tabs on either side of the grille and mount the fascia onto the fender studs.



26) Reinstall [2x] 10mm bolts to secure the fascia on either side of the grille.



27) Reinstall filler panel.



28) Reinstall [6x] plastic retainers to secure the filler panel.






29) Reinstall [2x] 10mm nuts to secure the fascia to the fender.



30) Reinstall [3x] phillips screws to secure the fender liner.

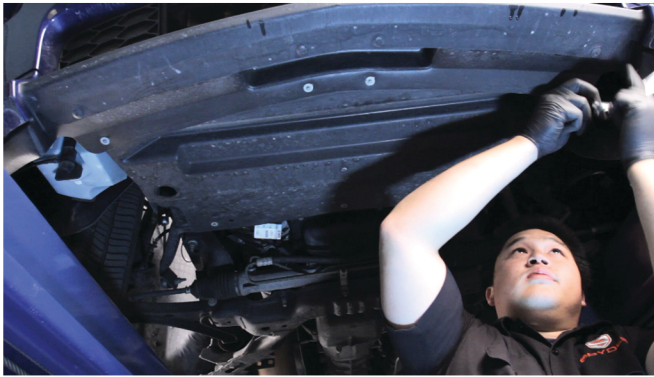

31) Reinstall [4x] plastic retainers to secure the fender liner.



32) Close the hood and enjoy your new Spyder projector headlights.





For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.  
[http://www.youtube.com/watch?v=7sgDg0\\_rqw0](http://www.youtube.com/watch?v=7sgDg0_rqw0)

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.