



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE:


PRO-YD-FM10-(ALL COLORS & VERSIONS)

### Tools Required

7mm, 8mm & 10mm Socket & ratchet  
Panel Popper

**\*Please Note\***


If you are unfamiliar with the installation processes, professional installation is highly recommended.

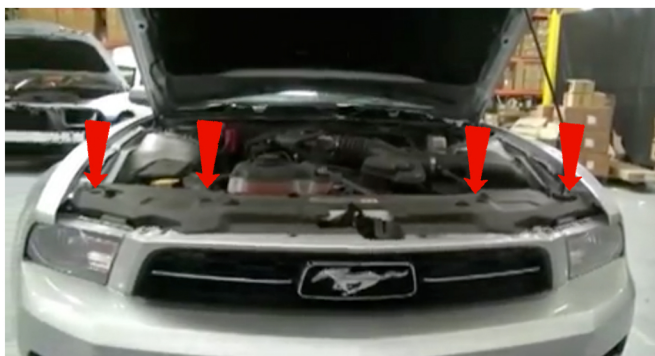

1) Remove the four plastic retainers securing the radiator cover panel.



2) Remove two 8mm bolts on either side of the upper grille section of the front fascia.

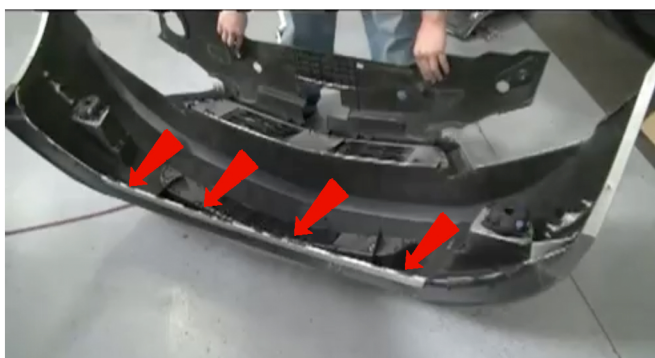

3) Remove the four 8mm bolts securing the underside of the front bumper fascia. The bumper is shown removed for illustration purposes.



4) Remove the two 7mm bolts in the fenderwell that secure the fender liner to the front bumper fascia.



5) Unseat the edges of the front bumper by pulling it away from the fender liner.



6) Unseat the bumper.



7) Remove the sidemarker lamp socket and disconnect the foglight harness, if so equipped. Then remove the bumper fascia completely and set it aside.



8) Remove the three 10mm bolts securing the headlight.




9) Remove the plastic retainer securing the headlight using a panel popper.



10) Disconnect the headlight harness and remove the corner lamp bulb socket.




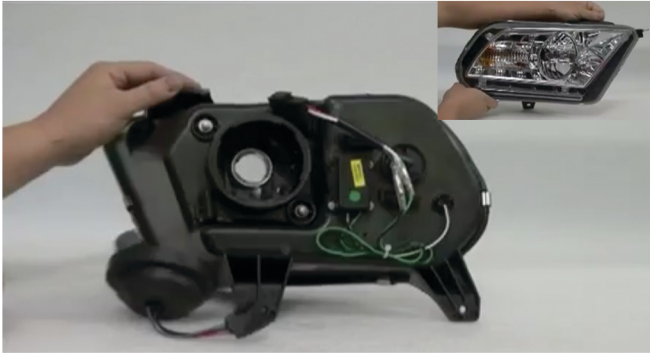

11a) For CRYSTAL DRL headlights, remove the OEM headlight bulb and transfer it to the SPYDER headlight.



12a) Install the OEM headlight bulb, then connect it to the SPYDER headlight harness and reinstall the headlight access seal securely on the rear of the headlight.

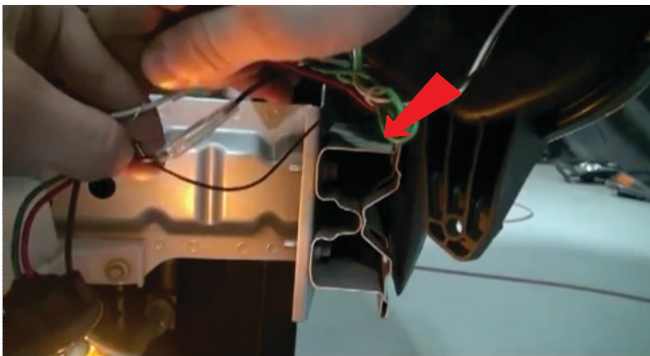

11b) For LED & CCFL Halo Projectors: No bulb transfer necessary. To wire LED halos to come on with DRLs, connect red LED lead to green LED wire and black LED lead to black LED wire. For CCFL version connect white/gray CCFL wires to inverter, connect red wire to green LED lead wire black wire to black LED lead wire.



12b) LED Halo & CCFL Halo: Remove the turn signal socket from the harness. All Versions: Reconnect Headlight and connect turn signal harness to SPYDER headlight.



13) The remaining steps are the same for all versions. Seat the SPYDER headlight.




14) Reinstall the three 10mm bolts and one plastic retainer securing the headlight to the body.



15) Reconnect the sidemarkers lamp harness and be sure to reconnect the foglight harness, if so equipped.



16) Reseat the front bumper fascia and work it gently back into place.

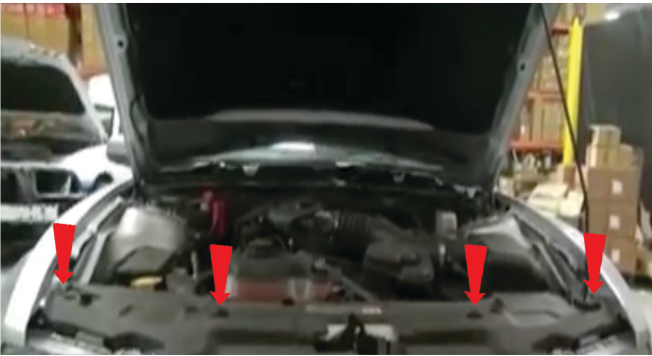


17) Reinstall the four plastic retainers that secure the radiator filler panel and upper front bumper fascia.



18) Reinstall the two 8mm bolts on either side of the grille.



19) Reinstall the two 7mm bolts in the fender-well.

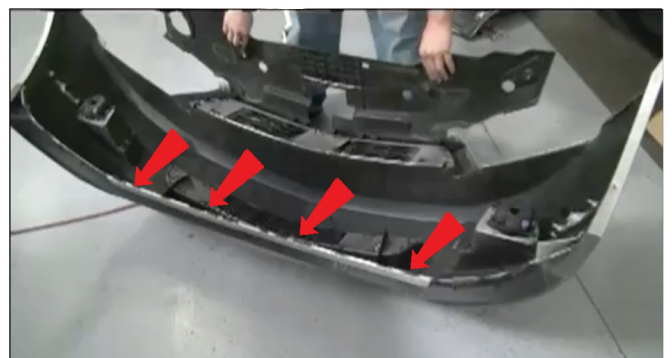

20) Reinstall the four 8mm bolts on the underside of the front bumper fascia. Bumper shown removed for illustration purposes.





21a) Enjoy your SPYDER Crystal DRL Headlights



21b) Enjoy your SPYDER LED Halo Projector Headlights



21c) Enjoy your SPYDER CCFL Halo Projector Headlights



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.  
<http://www.youtube.com/watch?v=zO1nTu39fA4>

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.