



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

PRO-YD-FR01-1PC-(ALL COLORS)

Tools Required

5.5mm Socket wrench/ratchet



Please Note


If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Remove two 5.5mm Bolts Securing Headlight Trim Cover.



2) Remove headlight trim cover.

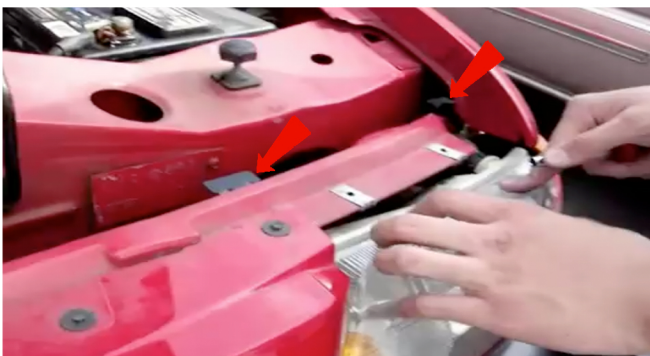


3) Pull up on the two retainer tabs indicated.




4) Unseat the headlight.



5) Disconnect the headlight and park light/turn signal harnesses from the headlight sockets.

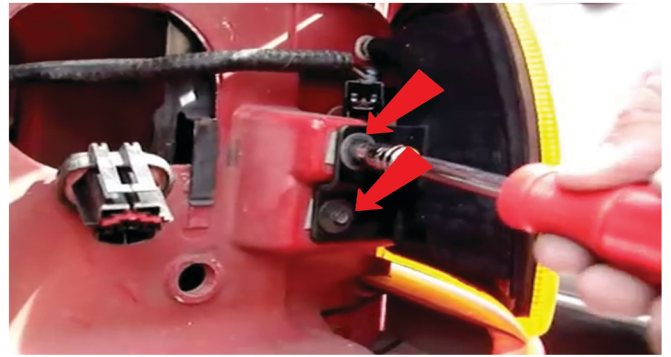

6) Remove two 5.5mm Screws securing the corner lamp.

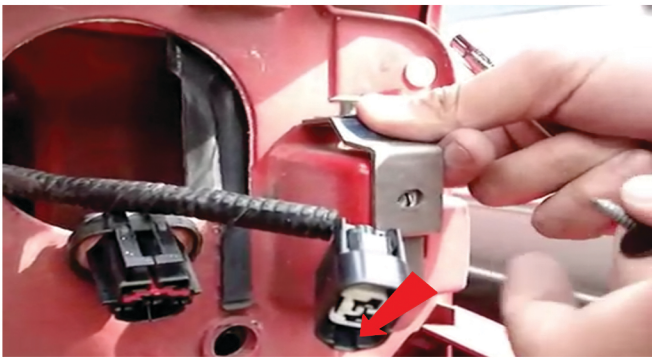

7) Locate the special bracket included with your SPYDER headlight. Install the bracket as shown in the location where the corner lamp bracket used to mount.




8) Remove the outer retainer tab and discard it.




9) Connect the SPYDER headlight harness to the factory wiring harness.



10) Seat the SPYDER headlight, then push down on the inner retainer tab to lock the headlight into place.

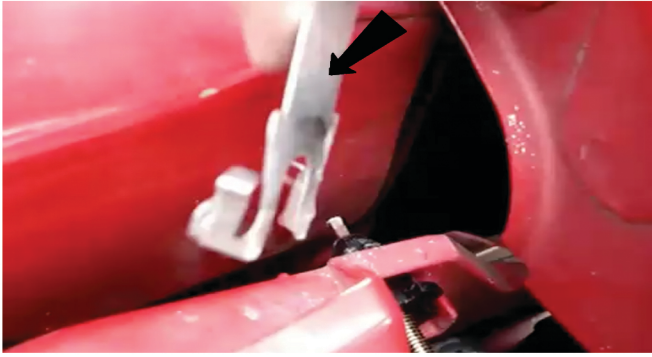

11) Locate the special retainer tab included with your SPYDER headlight. Install the special retainer tab in place of the old outer retainer tab that we removed.

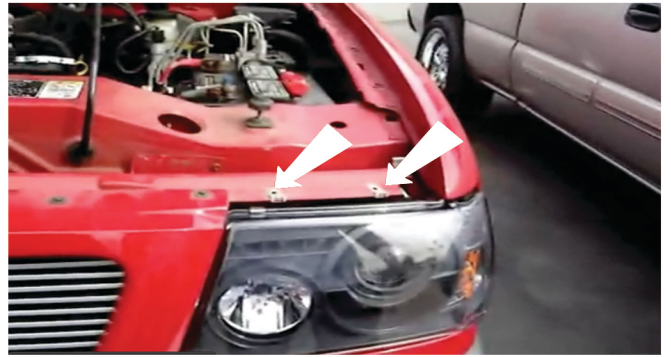

12) Reinstall black headlight trim strip and reinstall two 5.5mm bolts.



13) Enjoy your new SPYDER headlights.



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
<http://www.youtube.com/watch?v=Q81k5Pp4kK4>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.