



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE:

PRO-YD-HA98-(ALL COLORS)


### Tools Required

10mm Socket wrench/ratchet



#### **\*Please Note\***


If you are unfamiliar with the installation processes, professional installation is highly recommended.

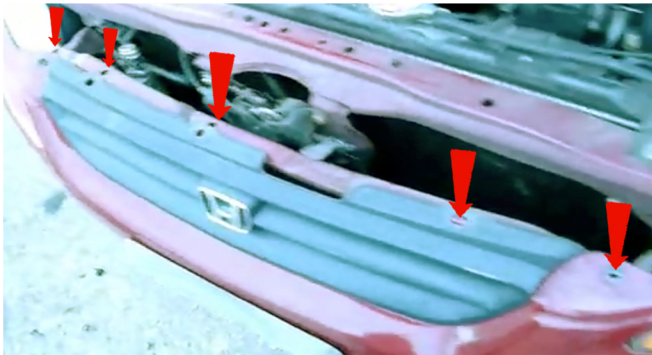


1) Open the hood. The five 10mm bolts along the top edge of the front bumper fascia.




2) Move to the wheel well and remove the two 10mm bolts securing the edge of the front bumper fascia and unseat the fascia.

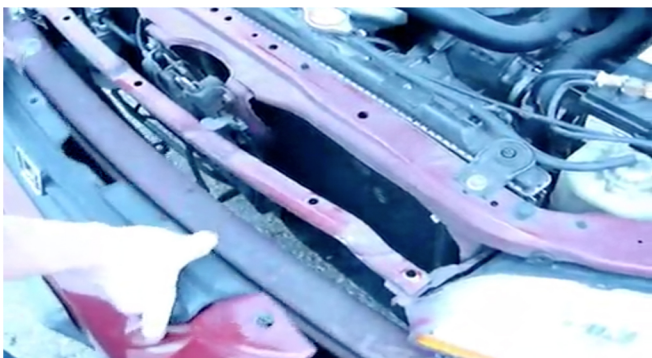


3) Unseat the front bumper fascia.

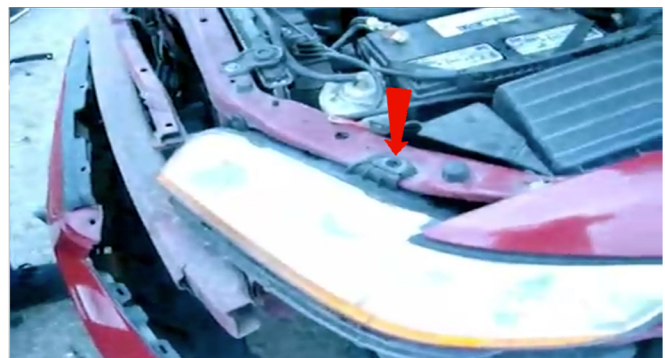

4) Remove the 10mm bolt securing the headlight from above.

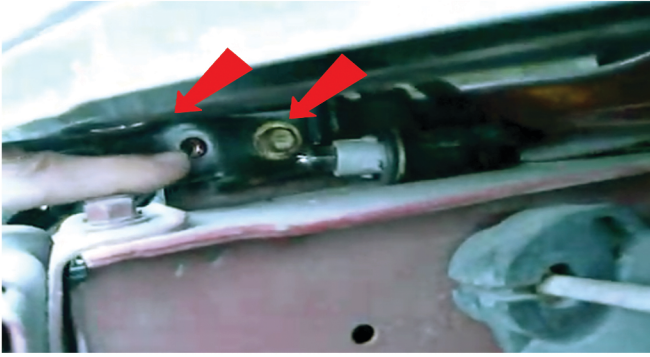


5) Remove the two 10mm bolts securing the headlight from below.

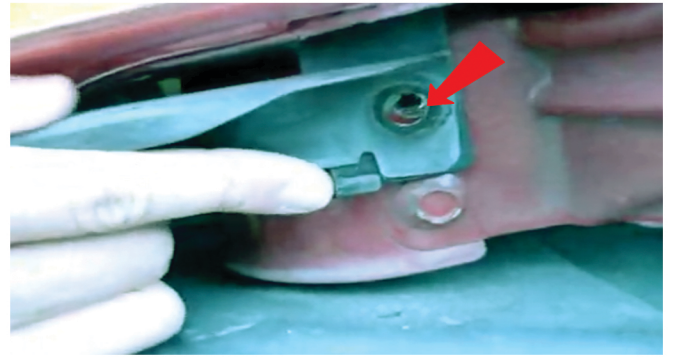

6) Remove the 10mm bolt below the turn signal.




7) Unseat the headlight and headlight bracket.

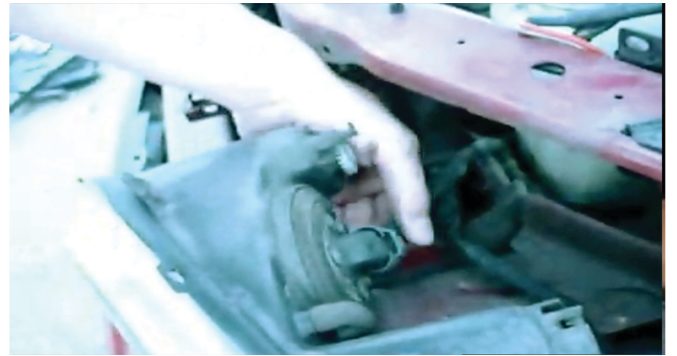

8) Disconnect the headlight wiring harness and remove the turn signal bulb socket from the OEM headlight assembly, then remove the OEM headlight completely and set it aside.




9) After removing the bolts securing the headlight, you should be able to remove the bracket from the OEM headlight. Transfer the bracket to the new SPYDER headlight.

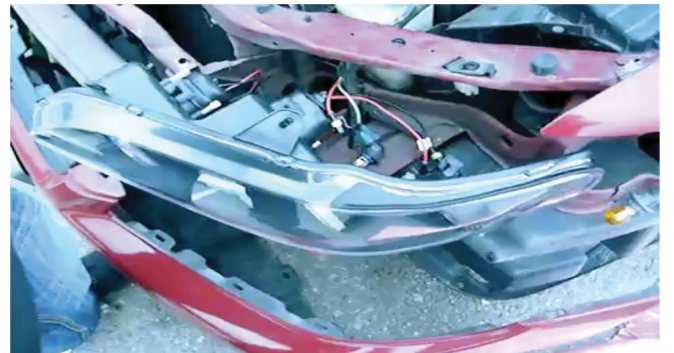


10) Locate the SPYDER headlight.




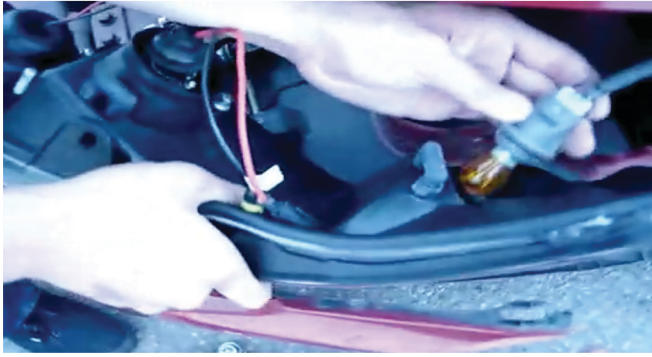


11) Reinstall the turn signal bulb into the SPYDER headlight.

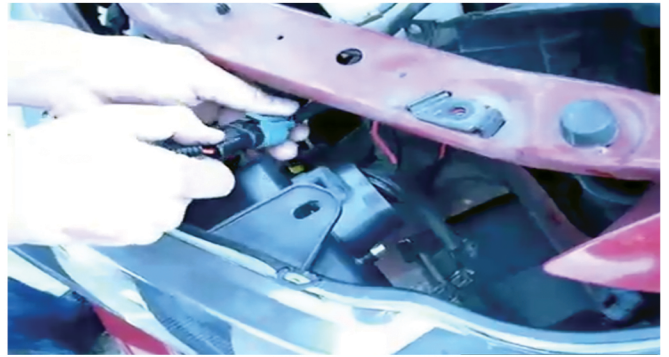

12) Connect the headlight harness to the SPYDER headlight.

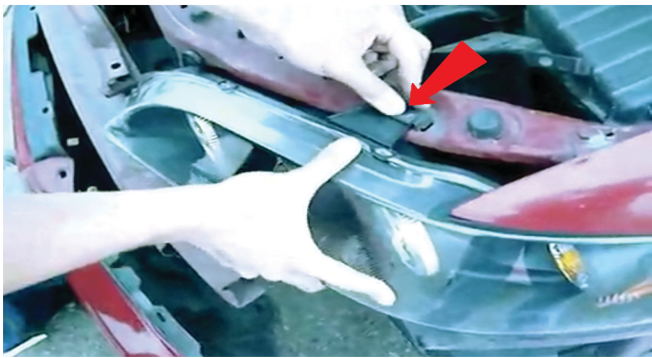

13) Seat the SPYDER Headlight. Reinstall the 10mm bolt securing the headlight from above.

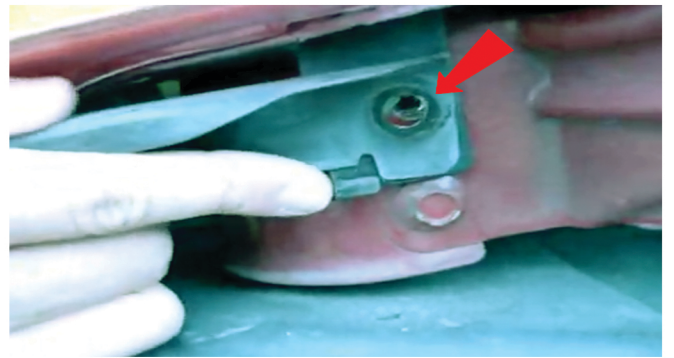

14) Reinstall the 10mm bolt securing the headlight below the turn signal area.



15) Reinstall the two 10mm bolts securing the headlight from below.



16) Re-seat the bumper fascia and reinstall the five 10mm bolts securing the upper bumper fascia.



17) Reinstall two 10mm bolts securing the front bumper fascia to the fender. Bumper shown unmounted for illustration purposes.



18) Close the hood and Enjoy your SPYDER headlights.





For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.  
[http://www.youtube.com/watch?v=hfdo\\_-HIQis](http://www.youtube.com/watch?v=hfdo_-HIQis)

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.