



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-HYSON11-(ALL COLORS)

Tools Required

10mm Socket & Ratchet

Panel Popper

Phillips Screwdriver

Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the hood.



2) Remove [6x] Phillips Retainers securing the fascia.



3) Remove [2x] 10mm bolts securing the corners of the fascia.



4) Remove the 10mm bolt securing the corner of the fascia in the wheel well.



5) Remove [2x] Phillips Retainers securing the corner of the fascia from below on each side.



6) Pull the corners out, then ease the bumper fascia back to unseat it.



7) Disconnect the fog lamp harness [if equipped], then remove the fascia and set it aside.



8) Remove [2x] 10mm bolts securing the headlight.



9) Remove [1x] 10mm bolt securing the headlight from below.




10) Unseat the headlight.




11) Disconnect the headlight wiring harness, then remove the headlight and set it aside.




12) Remove the low beam cover, then disconnect the low beam harness from the bulb.

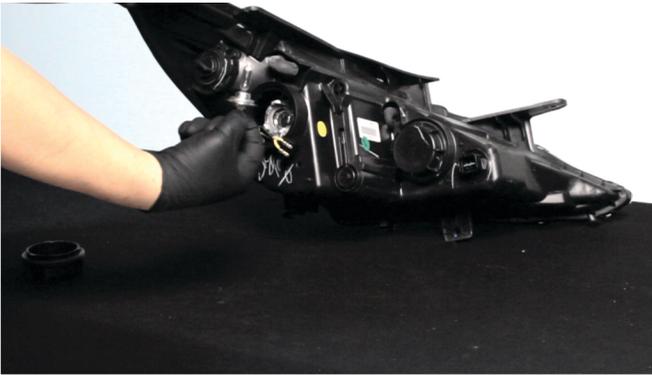


13) Unclip the bulb retainer then remove the low beam bulb from the headlight. Never touch exposed bulbs with bare hands.

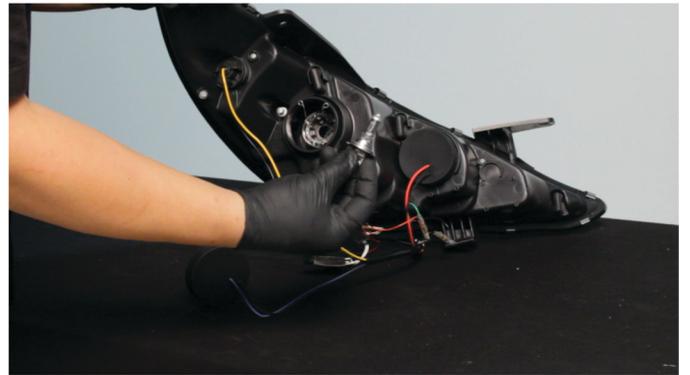


14) Transfer the low beam bulb to the Spyder headlight, then secure the bulb with the retainer clip.

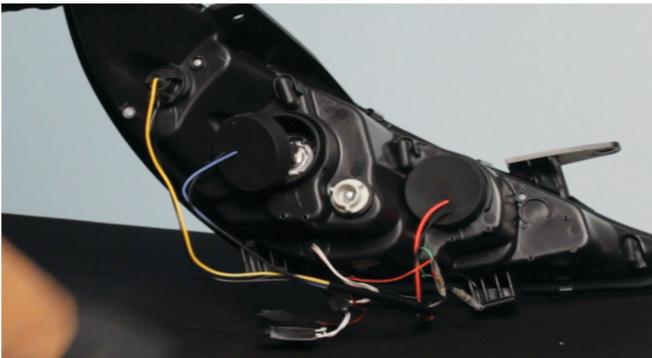

15) Connect the low beam harness to the bulb, then seat the low beam cover.

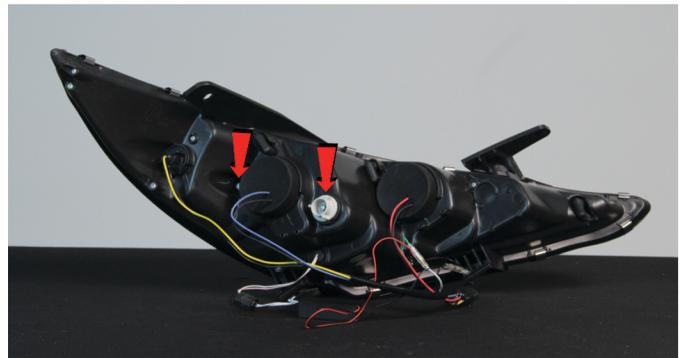

16) The headlight beam adjusters are shown here and are 8mm. The halo wire leads are red and black. For information on how to wire the halos and more, see the Spyder FAQs playlist on the Spyder Auto YouTube channel.

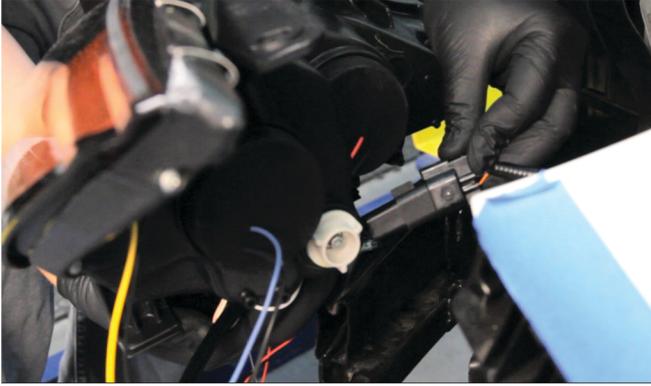

17) Connect the headlight wiring harness.



18) Seat the Spyder headlight.



19) Reinstall [2x] 10mm bolts to secure the headlight. Note that the lower 10mm bolt is not used for the Spyder headlight.



20) Reconnect the fog light wiring harness [if equipped].



21) Seat the bumper fascia, being sure that the edges are properly seated.



22) Reinstall the 10mm bolt that secures the corners of the fascia in the wheel well.



23) Reinstall [2x] Phillips Retainers that secure the fascia from below on each side.



24) Reinstall [6x] Phillips Retainers that secure the fascia along the top edge of the grille.



25) Reinstall [2x] 10mm bolts to secure the fascia.



26) Close the hood and enjoy your new Spyder projector headlights.



SPYDER
WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<https://www.youtube.com/watch?v=UzZb098mxWE>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.