



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE:

PRO-YD-JGC99-(CCFL or LED Halo, ALL COLORS)


### Tools Required

7mm Socket wrench/ratchet



**\*Please Note\***

If you are unfamiliar with the installation processes, professional installation is highly recommended.

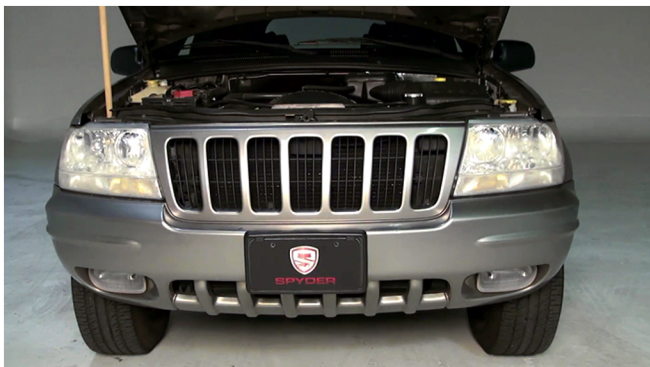

1) Start by opening the hood.



2) Remove the 7mm headlight retainer bolt.



3) Unseat the OEM headlight.




4) Remove the sidemarker and turn signal sockets from the OEM headlight. Never touch exposed bulbs with bare hands.



5) Disconnect the low beam harness.




6) Disconnect the high beam harness.

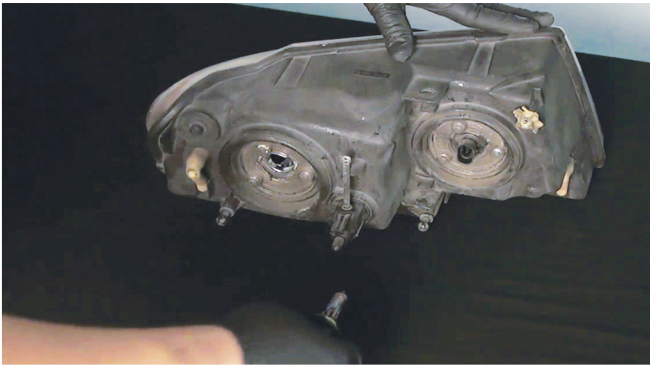

7) Remove the low beam bulb from the OEM headlight. Never touch exposed bulbs with bare hands.



8) Install the low beam bulb into the Spyder headlight. Be sure to check the bulb gasket and replace it if worn. Your Spyder headlight is now ready to install.

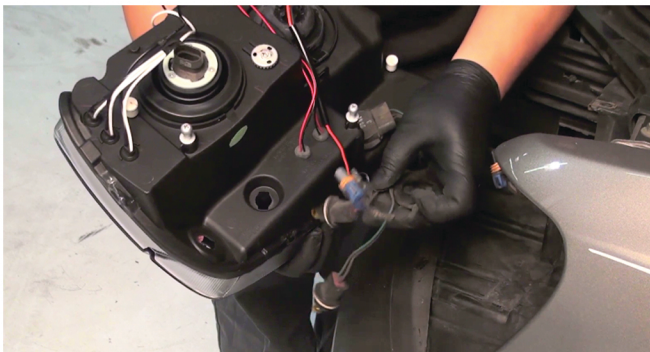


9) Reinstall the sidemarker and turn signal bulb sockets into the Spyder headlight. Never touch exposed bulbs with bare hands.



10) Reconnect the low beam harness.



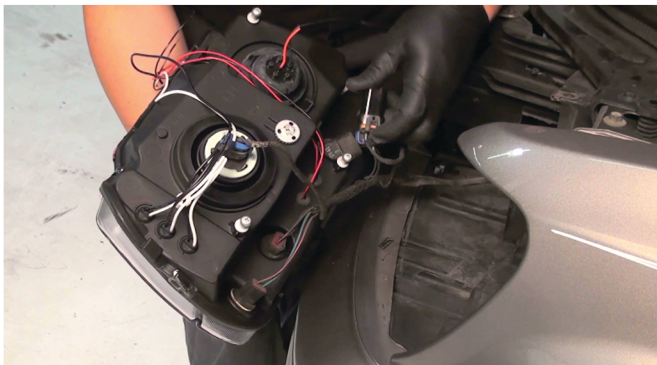

11) Reconnect the high beam harness.



12) Seat the Spyder headlight.



13) Reinstall the 7mm headlight retainer bolt.



14) Close the hood and enjoy your new Spyder headlights!



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.  
<http://www.youtube.com/watch?v=5a41CFMfgHU>

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.