



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE:

PRO-YD-TT05-(ALL COLORS)

### Tools Required

10mm Socket & Ratchet

Panel Popper


Phillips Screwdriver

*\*Please Note\**

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the hood, remove [2x] plastic retainers on either side of the grille.

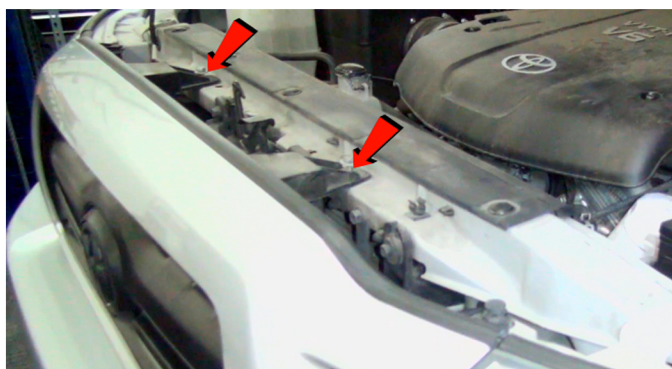

2) Remove [2x] phillips screws securing the grille.



3) Unseat and remove the grille.



4) Remove [1x] plastic retainer securing the headlight garnish.






5) Remove [3x] phillips screws securing the fender liner to the fascia.



6) Remove [1x] plastic retainer also securing the fender liner, then peel back the fender liner.

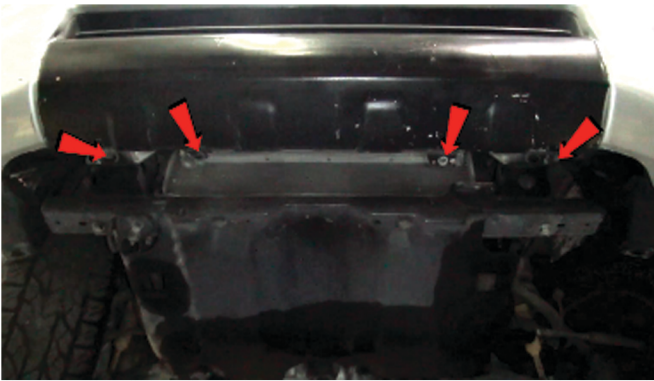

7) Remove [4x] plastic retainers securing the fascia from below.



8) Remove [3x] plastic retainers securing the fascia below the grille.




9) Unseat the front bumper fascia. Be sure to disconnect the fog lamp harness if equipped.



10) Remove [3x] phillips screws securing the headlight.



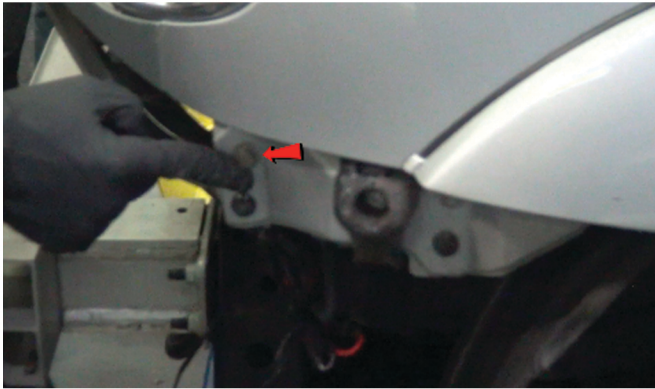

11) Remove [1x] 10mm bolt securing the headlight from the side.




12) Remove the headlight garnish by gently swinging it outwards and away.




13) Release the headlight retainer tabs.



14) Unseat and remove the headlight.

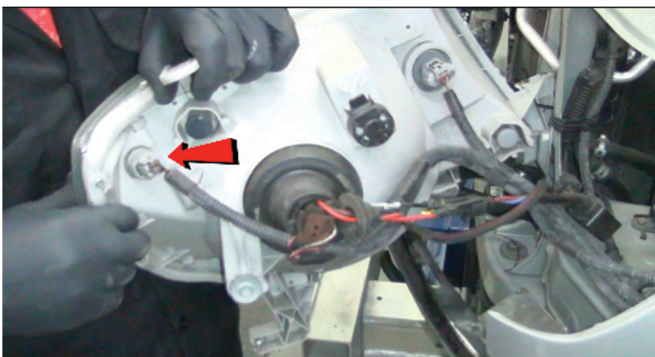


15) Disconnect the sidemarker harness.

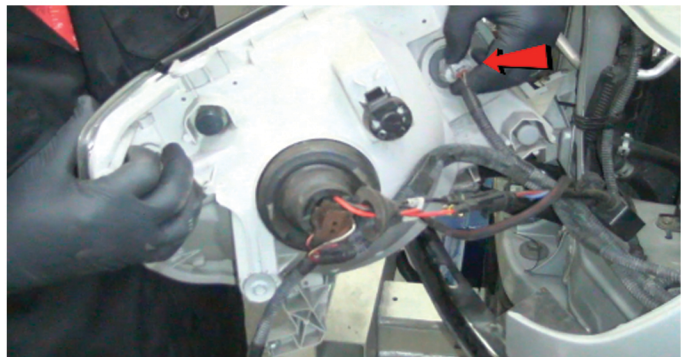


16) Disconnect the turn signal socket.




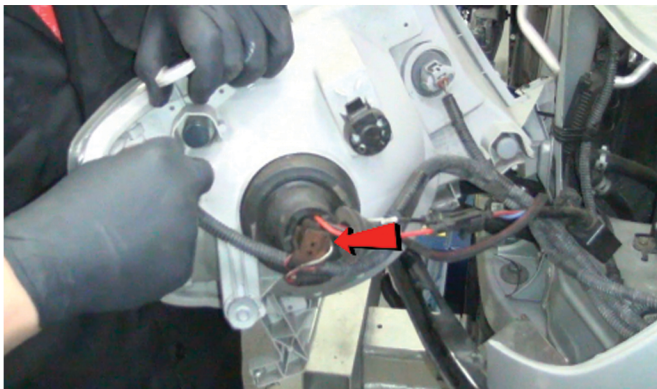


17) Disconnect the headlight harness, then remove the headlight and set it aside.

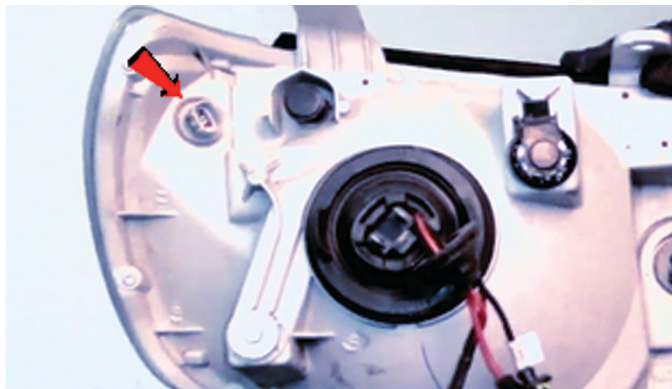


18) Remove the sidemarker socket from the OEM headlight. Never touch exposed bulbs with bare hands.

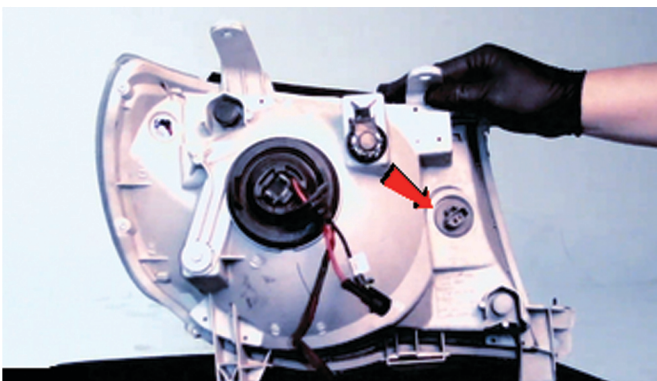


19) Remove the turn signal socket from the OEM headlight.

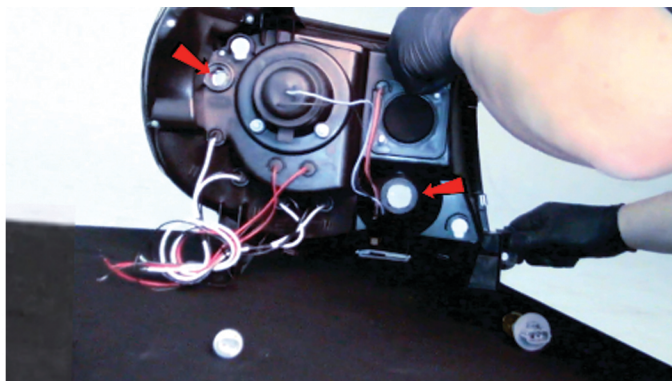

20) Transfer the bulb sockets to the Spyder headlight.

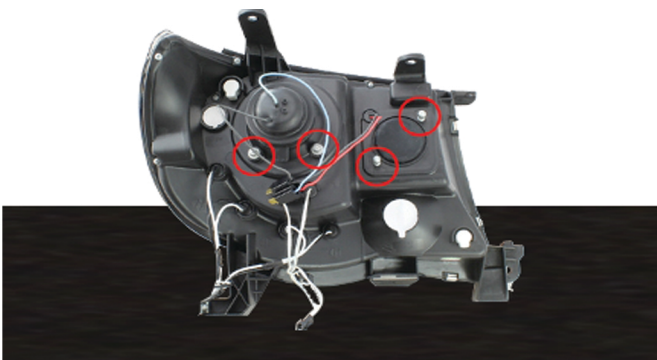


21) Your beam adjusters are shown here and are 8mm. For information on how to wire the halos and more, watch How to Wire Halos on the Spyder FAQs Playlist on the Spyder Auto YouTube channel.

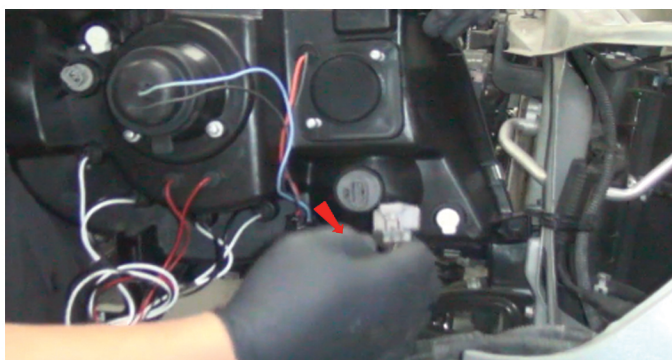

22) Connect the turn signal harness to the Spyder headlight.



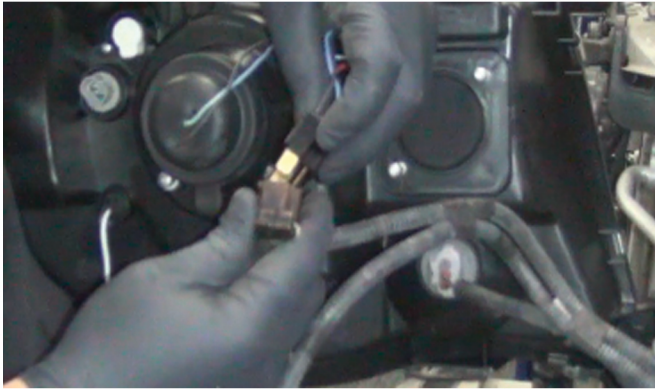

23) Reconnect the headlight harness to the Spyder headlight.



24) Seat the Spyder headlight, being sure to properly seat the headlight retainer tabs.



25) Reinstall [3x] phillips screws to secure the headlight.



26) Reinstall [1x] 10mm bolt to secure the headlight.



27) Replace the headlight garnish.




28) Reinstall [1x] plastic retainer to secure the garnish.





29) Seat the front bumper fascia. Be sure to reconnect the foglight harnesses, if equipped.

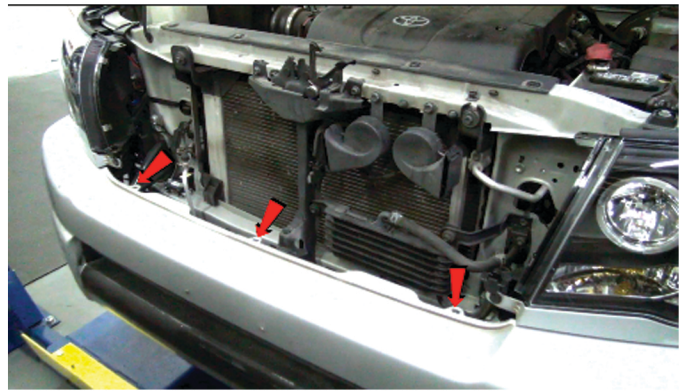

30) Reinstall [3x] plastic retainers to secure the fascia.




31) Seat the grille.



32) Reinstall [2x] plastic retainers to secure the grille.



33) Reinstall [2x] phillips screws to secure the grille.

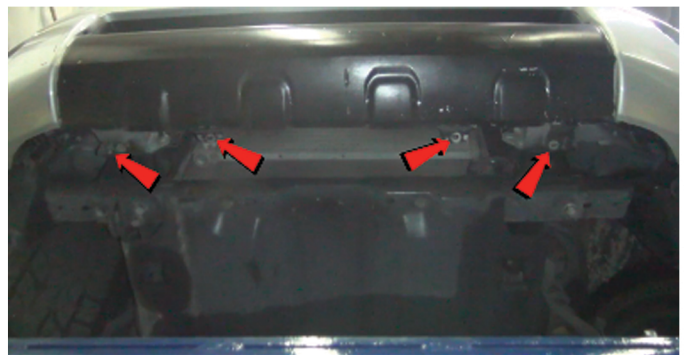

34) Reinstall [4x] plastic retainers to secure the fascia from below.





35) Reinstall [3x] phillips screws to secure the fender liner to the fascia.



36) Reinstall [1x] plastic retainer to secure the fender liner.



37) Close the hood and enjoy your new Spyder projector headlights.





For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.  
[http://www.youtube.com/watch?v=QQb5Owdv\\_mY](http://www.youtube.com/watch?v=QQb5Owdv_mY)

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.