



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

ALT-YD-AA496-LED-(ALL COLORS)


Tools Required

8mm Socket/Ratchet




Please Note


If you are unfamiliar with the installation processes, professional installation is highly recommended.

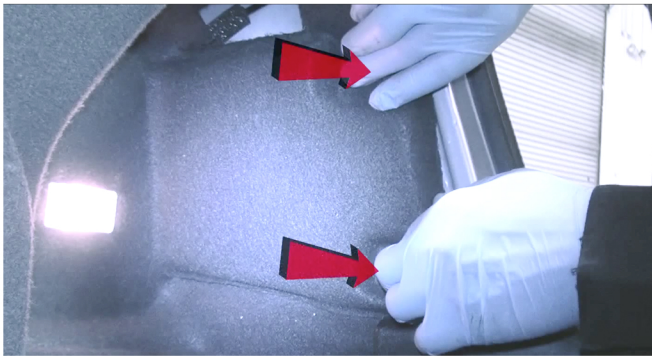

1) Open the trunk. Remove the plastic trunk retainers, then peel back the trunk liner to access the backside of the tail light.

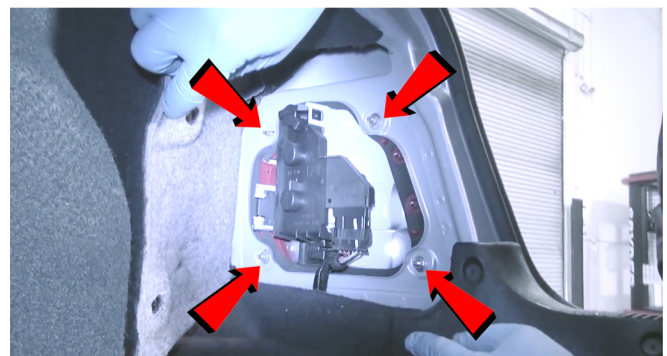


2) Remove the four 8mm nuts securing the tail light.

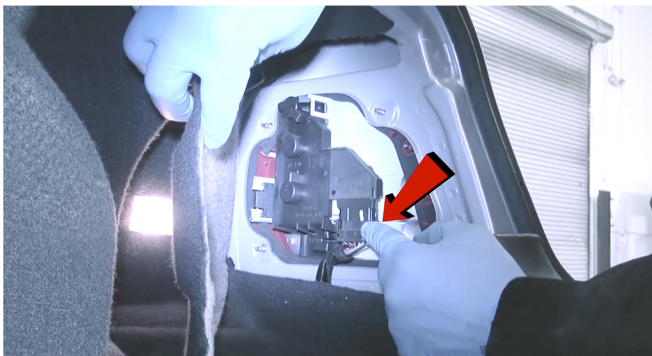


3) Disconnect the wiring harness plug. To disconnect the plug, push the side of the plug, then pry it outwards.



4) Unseat the tail light and remove it from the car. We'll need to transfer a few bulbs from the OEM tail light to the SPYDER tail light, so keep it handy.

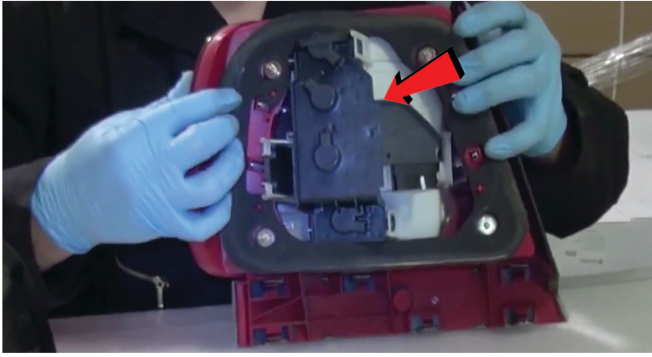


5) Remove the bulb mount bar from the OEM A4/S4 tail light. Release the mounting tabs to remove the bulb mount bar.

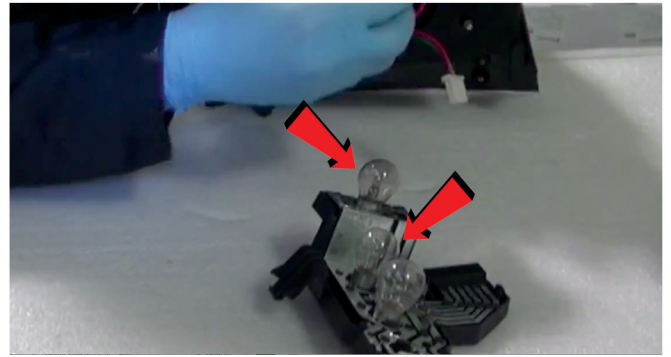


6) Remove the bulb from the raised position on the bulb mount bar and install it into the socket with black and white wires on the SPYDER tail light. Remove the center bulb from the bulb mount bar and install it in the socket with blue and black wires on the SPYDER tail light.



7) Seat the SPYDER tail light.

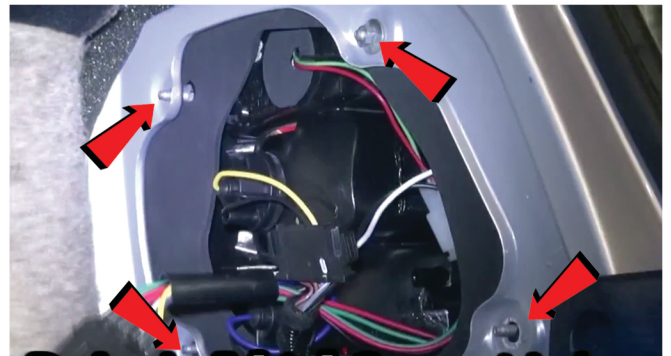

8) Reinstall the four 8mm nuts that secure the tail light to the body.

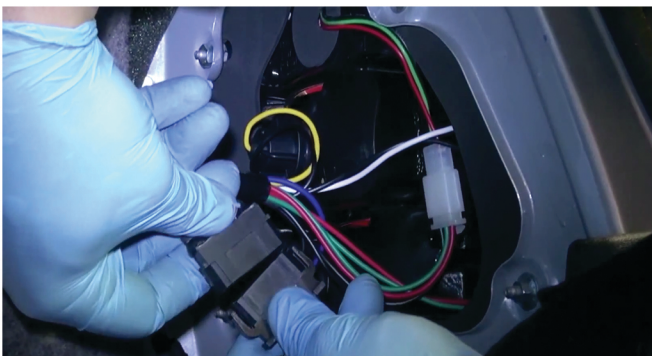

9) Reconnect the wiring harness, then replace the trunk liner and reinstall the two plastic retainers.



10) Enjoy your new SPYDER tail lights.



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
<http://www.youtube.com/watch?v=Ut4I07e66jQ>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.