



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

ALT-YD-ATT99-LED-(ALL COLORS)

Tools Required

Phillips Screwdriver



Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.




1) Open the trunk and open the tail light access panel.




2) Remove [2x] plastic thumbscrews securing the outer tail light.




3) Unseat the OEM tail light.

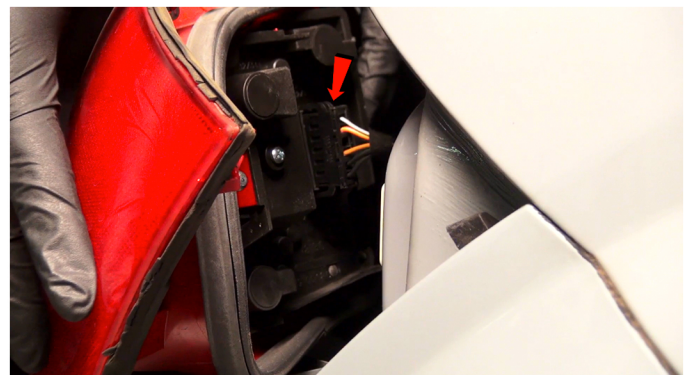

4) Disconnect the tail light wiring harness.

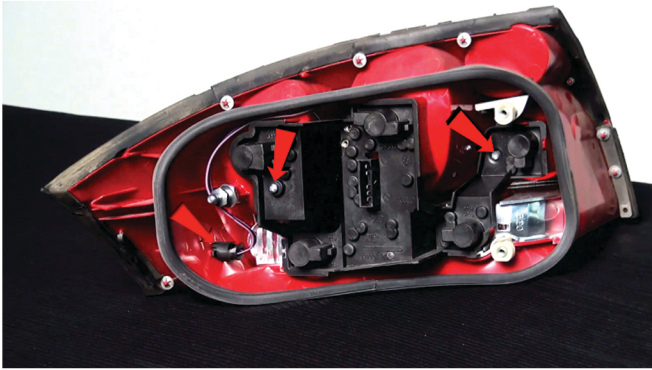

5) Remove [2x] Phillips screws securing the bulb plate to the tail light. Remove the side marker socket from the OEM tail light.

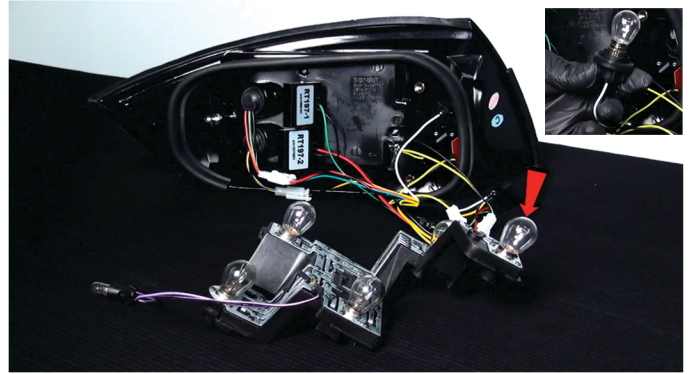

6) Remove the bulb plate, then transfer the reverse lamp from the bulb plate to the black and white wire reverse socket of your Spyder tail light. Then reinstall the socket. Never touch exposed bulbs with bare hands. Your Spyder tail light is now ready to install.



7) Connect the Spyder tail light to the wiring harness.



8) Seat the Spyder tail light.



9) Reinstall the two plastic thumbscrews (white on top, black on the bottom), then close the access panel.



10) Close the trunk and enjoy your new Spyder tail lights!



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
<http://www.youtube.com/watch?v=OM2jgTavegI>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.