SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

ALT-YD-DMAG05-LED-(ALL COLORS)

Tools Required

Panel Popper

Please Note
If you are unfamiliar with the installation processes, professional installation is highly recommended.

1) Open the tailgate.

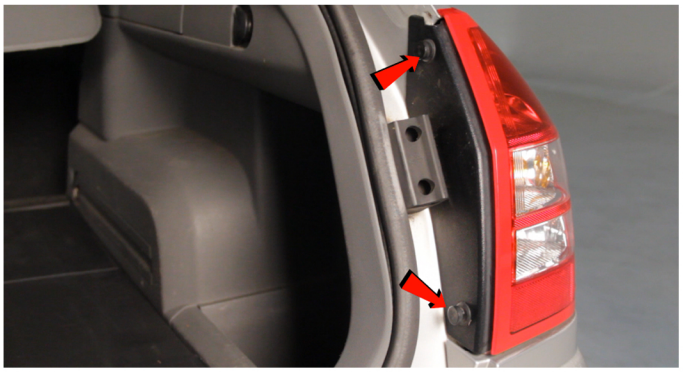

2) Remove [2x] plastic retainers securing the tail light along the tailgate sill.

3) Remove the tail light cover panel.

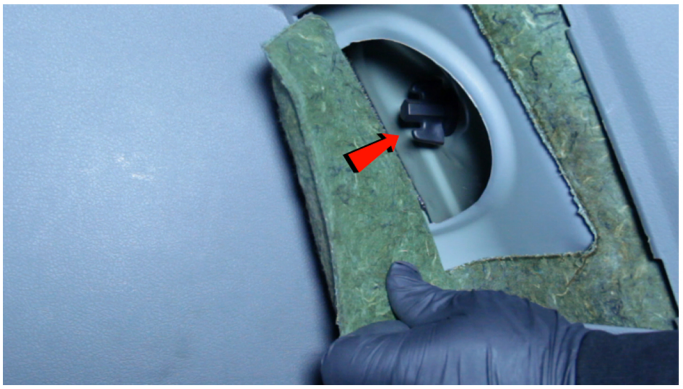

4) Remove the thumbscrew securing the tail light.

5) Unseat the tail light.

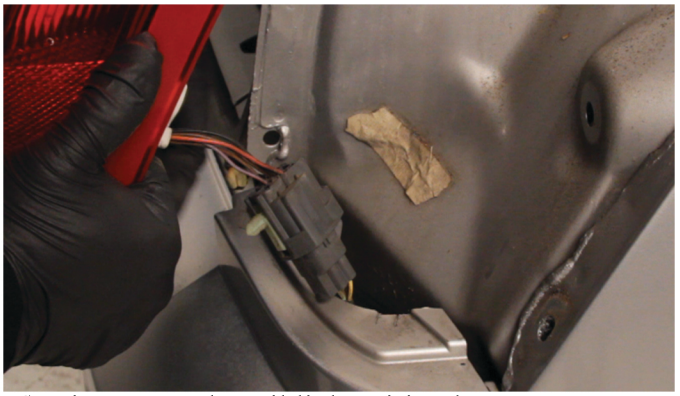

6) Disconnect the tail light wiring harness.

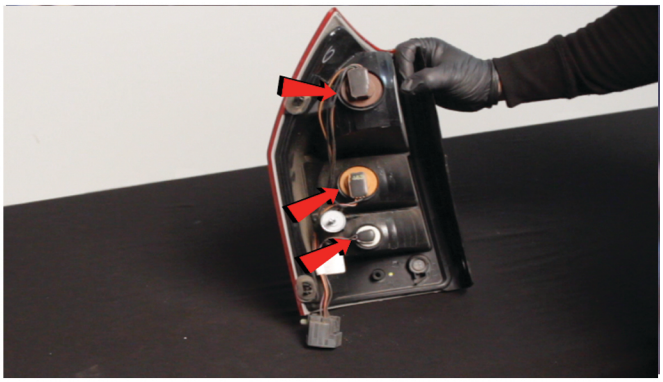

7) Remove the brake/park lamp, turn signal and reverse lamp sockets from the OEM tail light. Never touch exposed bulbs with bare hands.

8) Remove the harness from the OEM tail light.

9) Remove the brake lamp bulb from its socket.

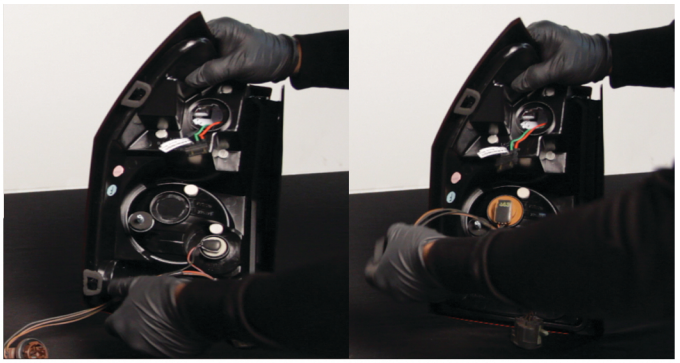

10) Install the reverse and turn signal sockets into the Spyder tail light.

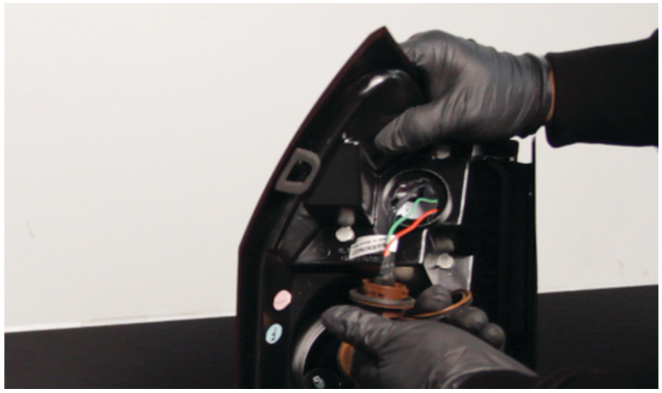

11) Install the Spyder socket insert into the brake lamp socket. Align the black wire side of the insert with the black wire side of the socket to ensure correct polarity, then install the socket.

12) Reconnect the tail light harness.

13) Seat the Spyder tail light.

14) Reinstall [2x] plastic retainers to secure the tail light.

15) Reinstall the thumbscrew to secure the tail light, then reinstall the tail light cover panel.

16) Close the tailgate and enjoy your new Spyder LED tail lights.

SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
http://youtu.be/muNMQokL838

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.