



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

ALT-YD-MBW16398-(ALL COLORS)

Tools Required

10mm Socket wrench/ratchet



Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the tailgate.




2) Remove the [2x]10mm/Flathead bolts securing the tail light.



3) Unseat the OEM tail light.




4) Disconnect the wiring harness.

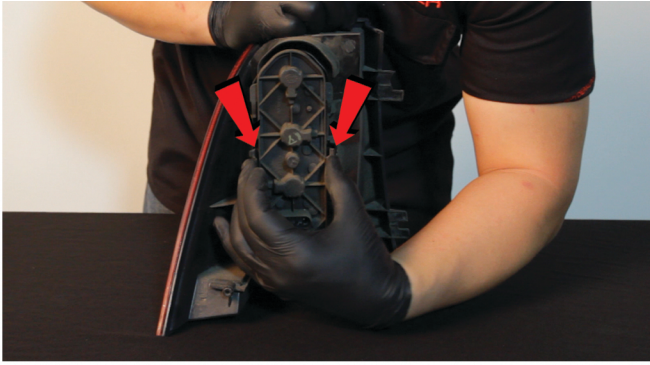


5) Remove the bulb panel from the OEM tail light by squeezing the retainer tabs together to release it.



6) Remove the reverse lamp bulb from the 2nd position on the bulb panel. Never touch exposed bulbs with bare hands.

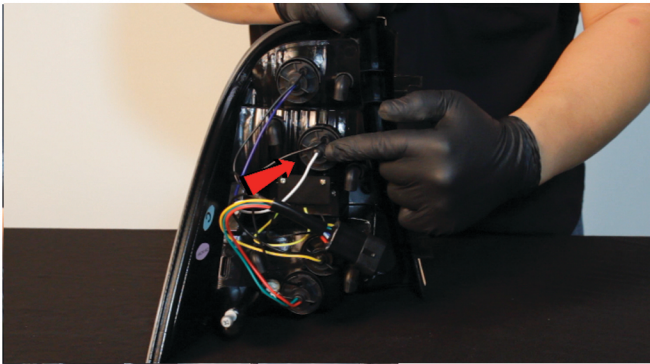

7) Remove the reverse lamp socket (white/black wire socket) from the Spyder tail light.

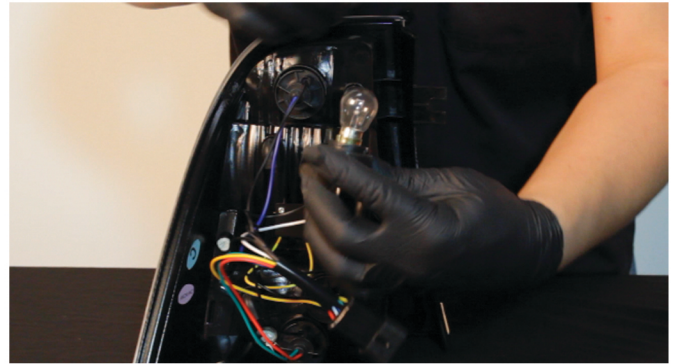

8) Install the bulb into the Spyder reverse lamp socket, then reinstall the socket securely into the Spyder tail light housing, then you're ready to install the Spyder LED tail light.



9) Connect the Spyder tail light to the tail light wiring harness.



10) Seat the Spyder tail light, taking care not to pinch the harness between the tail light and body.



11) Reinstall [2x] 10mm/flathead bolts securing the tail light.



12) Close the tailgate and enjoy your new Spyder tail lights.

13) Reinstall the plastic retainer securing the fascia to the undertray on each side.



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://youtu.be/3JUt3xn1Jug>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.