



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

ALT-YD-TT05-LED-(ALL COLORS)

Tools Required

10mm Socket + Ratchet




Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.




1) Open the tailgate.

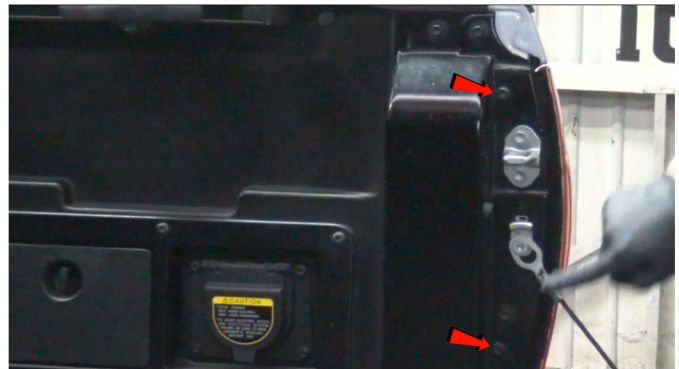


2) Remove the [2x] 10mm bolts securing the tail light.




3) Unseat the OEM tail light.

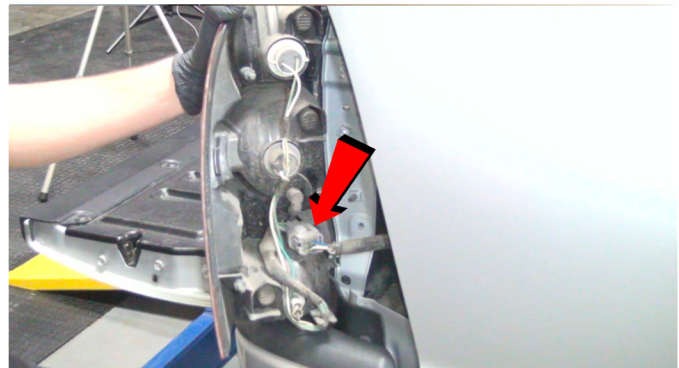

4) Disconnect the wiring harness.

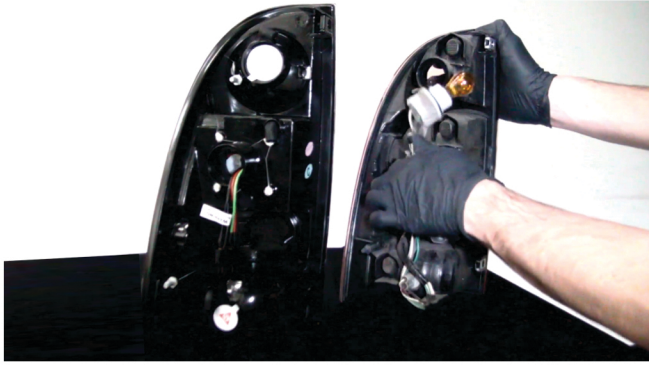

5) Remove the turn signal, brake/park lamp and reverse lamp sockets from your OEM tail light, then transfer the bulb socket harness to your Spyder tail light. Never touch exposed bulbs with bare hands.

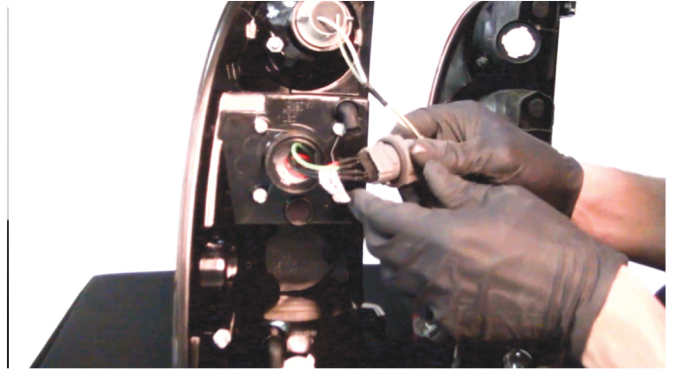


6) Reinstall the turn signal and reverse lamp bulb sockets into your Spyder tail light. Remove the brake lamp bulb from the socket, and install the Spyder socket insert. Align the black wire side of the socket with the black wire side of the insert.



7) Reconnect the wiring harness.



8) Seat the Spyder tail light.

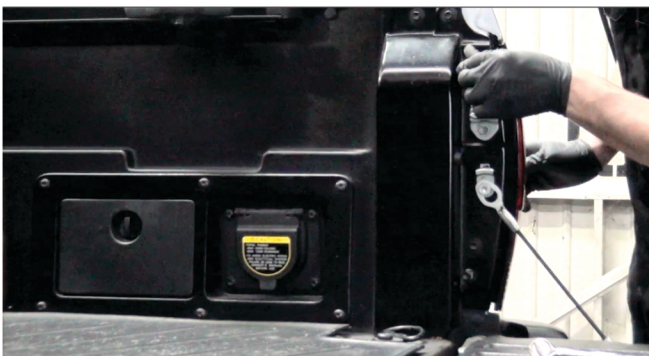

9) Reinstall the two 10mm bolts securing the tail light.



10) Close the tailgate and enjoy your new Spyder tail lights!



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
<http://www.youtube.com/watch?v=FNTvrKY092M>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.