



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE:

ALT-YD-TYA062D-LED-(ALL COLORS)

### Tools Required

10mm Socket & Ratchet

Panel Popper




*\*Please Note\**


If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the tailgate.

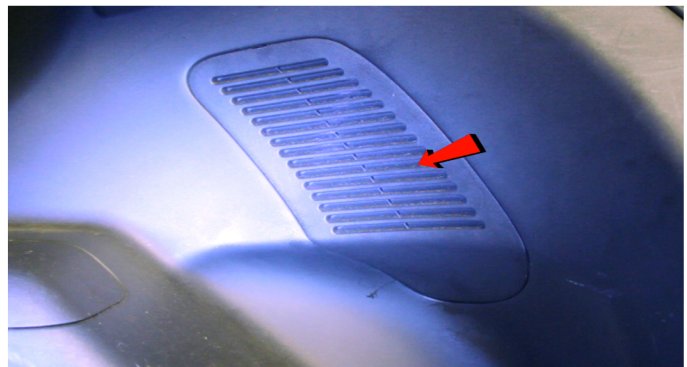

2) Remove the tail light access cover.

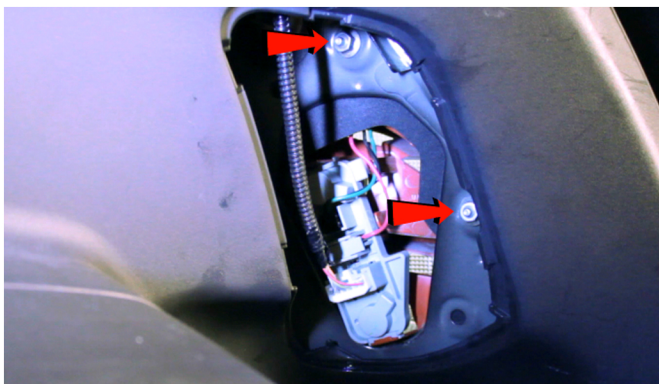


3) Remove [2x] 10mm nuts securing the tail light.



4) Unseat the tail light.



5) Disconnect the tail light harness.

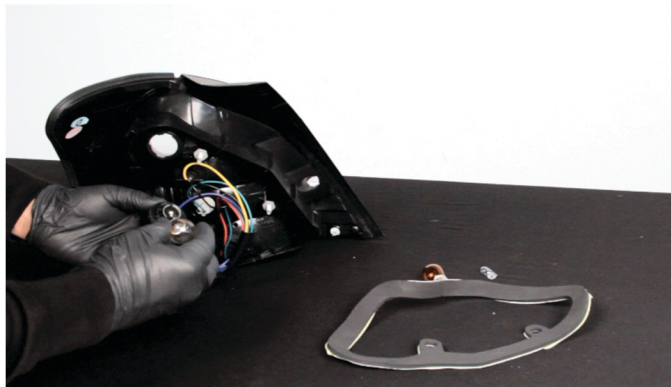

6) Before installing your Spyder tail light, install the included reverse bulb into the blue and black wire reverse socket. Never touch exposed bulbs with bare hands. Reinstall the socket.



7) Install the included amber bulb into the yellow and black wire turn signal socket. Reinstall the socket.



8) Install the included small 194 bulb into the green and black wire socket. Reinstall the socket.



9) Install the included adhesive gasket onto the backside of the tail light.



10) Connect the tail light harness.





11) Seat the Spyder tail light.



12) Reinstall [2x] 10mm nuts to secure the tail light.



13) Reinstall the tail light access cover.



14) Close the tailgate and enjoy your new Spyder LED tail lights.



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<https://www.youtube.com/watch?v=za43t9EyUgc>

## Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.