



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

PRO-YD-CCOB05-(ALL COLORS)

Tools Required


10mm Socket & Ratchet

Panel Popper




Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.

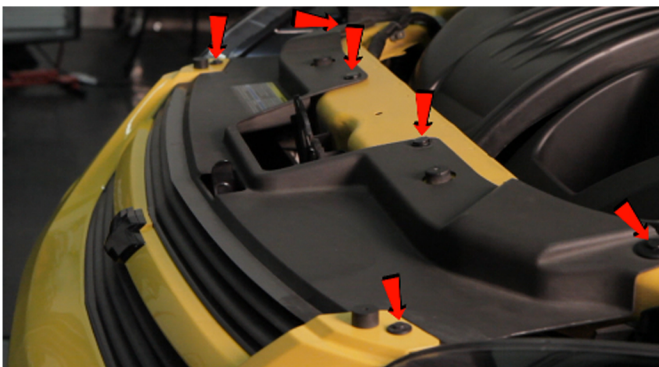


1) Open the hood. Remove [6x] plastic retainers securing the fascia.

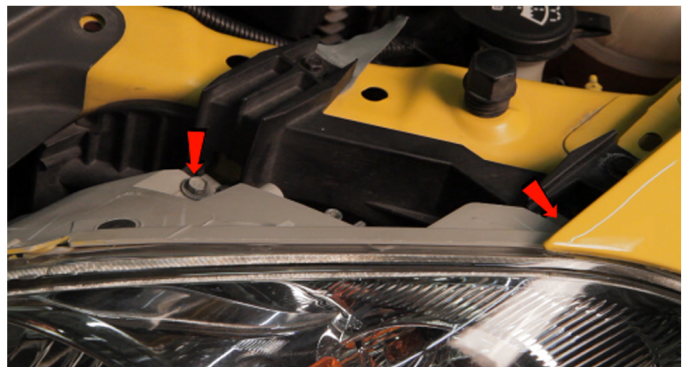

2) Remove [2x] 10mm bolts securing the headlight.



3) Unseat the headlight.

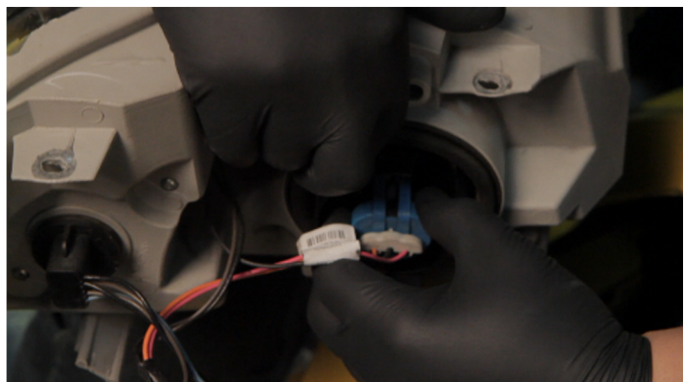


4) Disconnect the headlight harness.




5) Remove the turn signal socket from the headlight.



6) Remove the city light socket from the headlight.

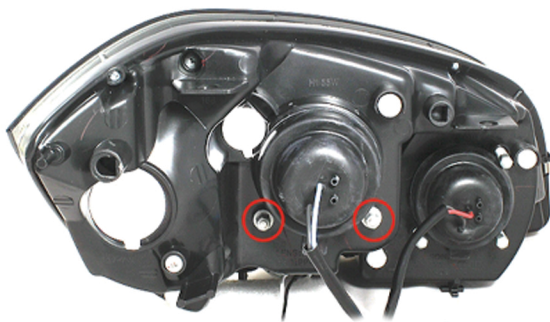

7) The beam adjusters are shown here and are 8mm. For information on wiring the halos, watch "How To Wire Halos" on the Spyder FAQs playlist on the Spyder Auto YouTube channel.

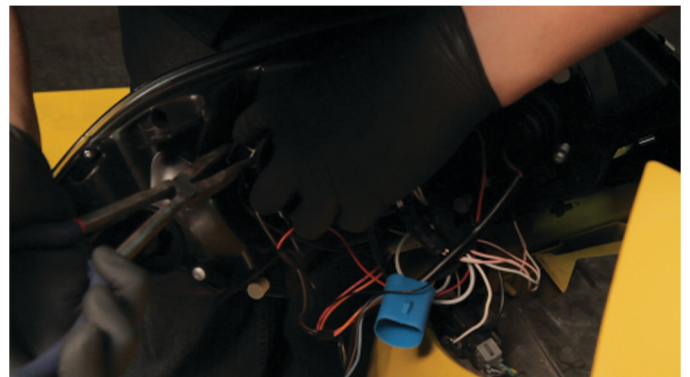

8) Reinstall the city light socket into the Spyder headlight.



9) Reinstall the turn signal socket into the Spyder headlight.



10) Reconnect the headlight wiring harness.



11) Seat the Spyder headlight.



12) Reinstall [2x] 10mm bolts to secure the headlight.



13) Reinstall [6x] plastic retainers to secure the fascia.



14) Close the hood and enjoy your new Spyder projector headlights.



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
<http://youtu.be/wLBNCb2A2c4>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.