



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-FES08-DRL-(ALL COLORS)

Tools Required

10mm Socket & Ratchet
Panel Popper



Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.




1) Open the hood.



2) Remove [2x] 10mm bolts securing the fascia
above the grille.



3) Remove [3x] plastic retainers securing the
fascia to the fender liner in the wheel well on
each side.

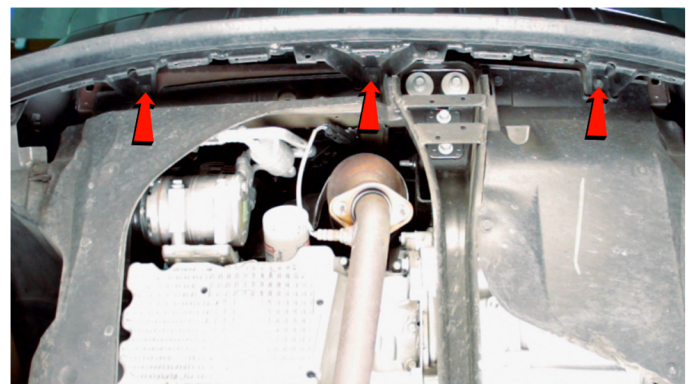


4) Remove [3x] 10mm bolts securing the fascia to the
undertray.




5) Remove [2x] 10mm bolts securing the fascia at the bottom corner on each side.



6) Unseat the front bumper fascia.

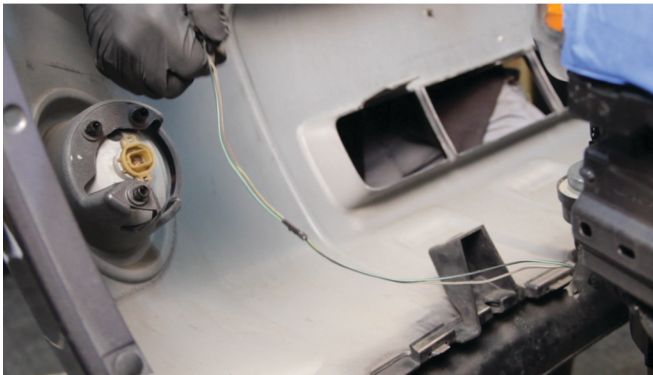

7) Disconnect the foglight harness.

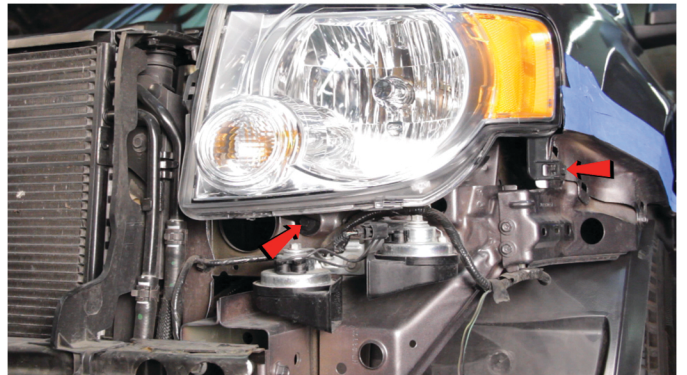


8) Remove [2x] 10mm bolts securing the headlight from below.




9) Remove [1x] 10mm bolt & [1x] 10mm nut securing the headlight from above.



10) Unseat the headlight.

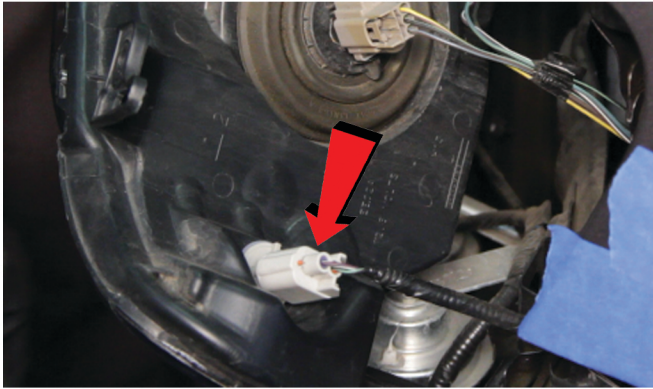


11) Disconnect the sidemarker harness.

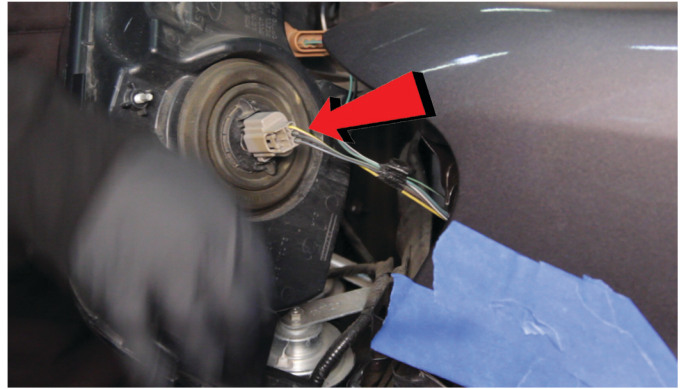


12) Disconnect the headlight harness.




13) Disconnect the turn signal harness, then remove the headlight.

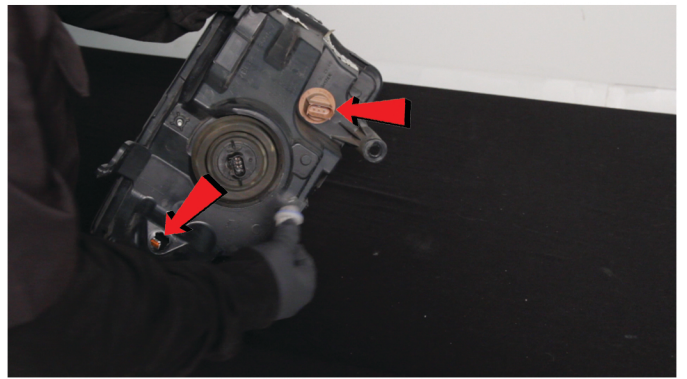


14) Remove the sidemarker socket and turn signal socket from the OEM headlight. Never touch exposed bulbs with bare hands.

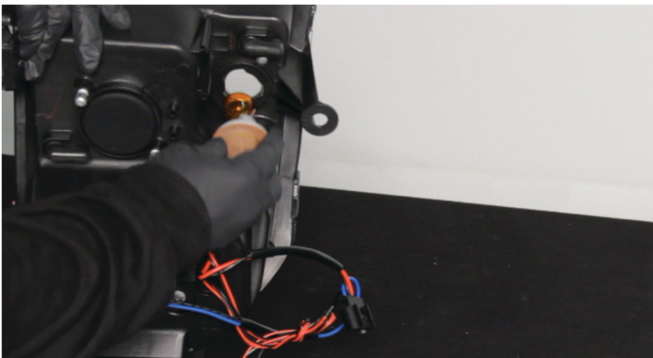


15) Install the turn signal socket into the Spyder headlight.

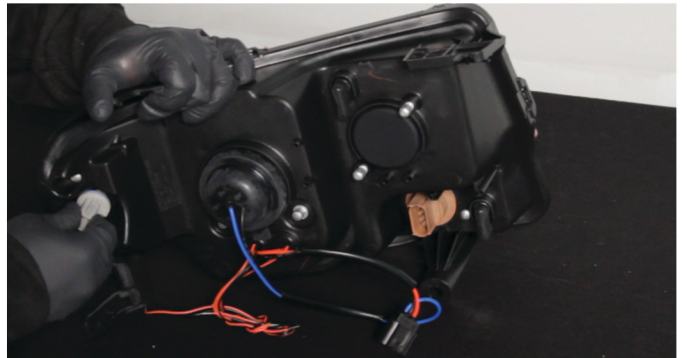

16) Install the sidemarker socket into the Spyder headlight.

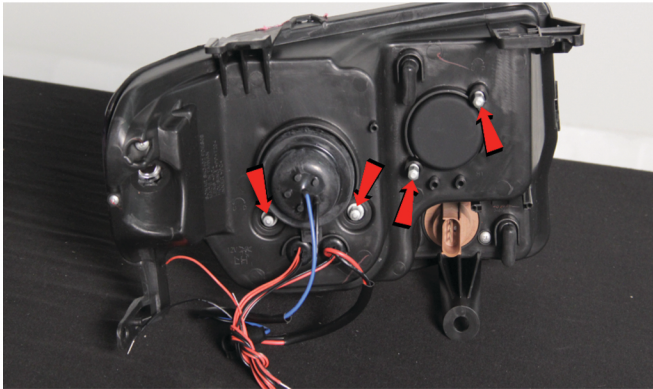

17) The headlight adjusters are shown here and are 8mm. For information on wiring the halos and LED DRLs, see the Spyder FAQs playlist on the Spyder Auto YouTube channel.

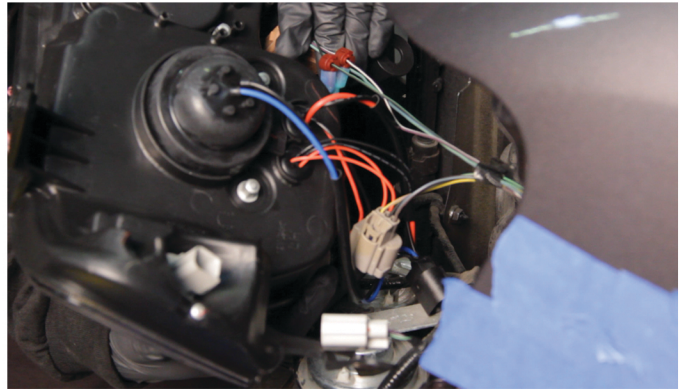

18) Reconnect the turn signal harness.



19) Reconnect the headlight harness.




20) Reconnect the sidemarker socket.




21) Seat the Spyder headlight being sure to snap the retainer tabs into place.




22) Reinstall [1x] 10mm nut & [1x] 10mm bolt securing the headlight from above.

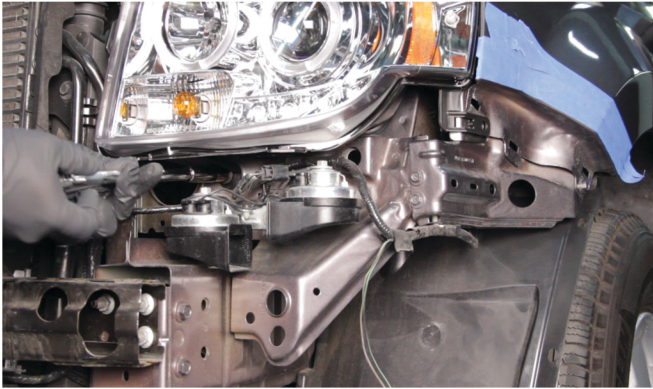

23) Reinstall [2x] 10mm bolts below the headlight to mount it.

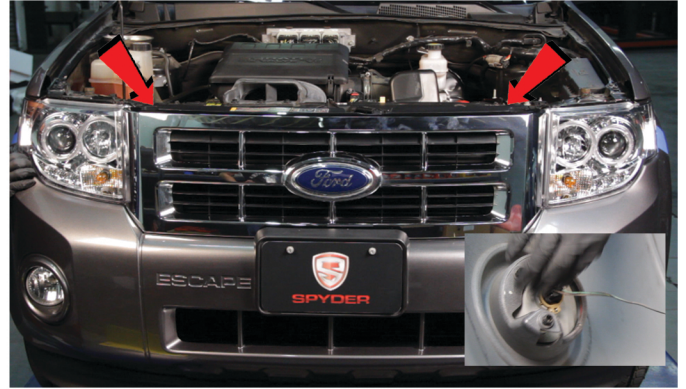

24) Seat the front bumper fascia and reinstall [2x] 10mm bolts above the grille to secure the fascia. Reconnect the fog light harnesses, if equipped.

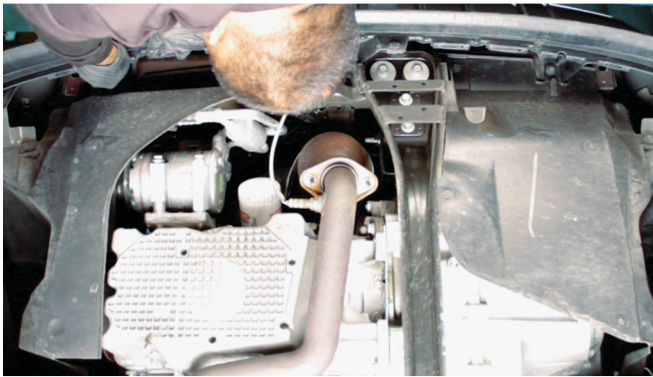

25) Reinstall [3x] 10mm bolts to secure the fascia to the undertray.



26) Reinstall [2x] 10mm bolts to secure the fascia at the bottom corner of the fascia on each side.



27) Reinstall [3x] plastic retainers in the wheel well to secure the fascia to the fender liner.



28) Close the hood and enjoy your new Spyder headlights.



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
<http://youtu.be/E9t2a935z9I>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.