



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

PRO-YD-NT104- (ALL COLORS)

Tools Required

10mm Socket wrench/ratchet


Flathead Screwdriver

Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Remove [7x] Plastic Retainers securing grille.
Use a flathead screwdriver to twist retainers free.

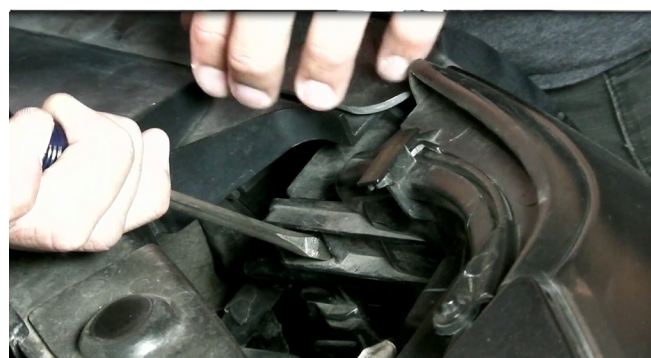

2) Release the corner clips securing the grille.



3) Remove the grille and set it aside.




4) Remove the headlight trim panel by gently prying it free.



5) Remove [2x] 10mm Bolts Securing the Headlight that are accessible from this vantage point.



6) Disconnect the headlight harness connector inboard of the headlight.

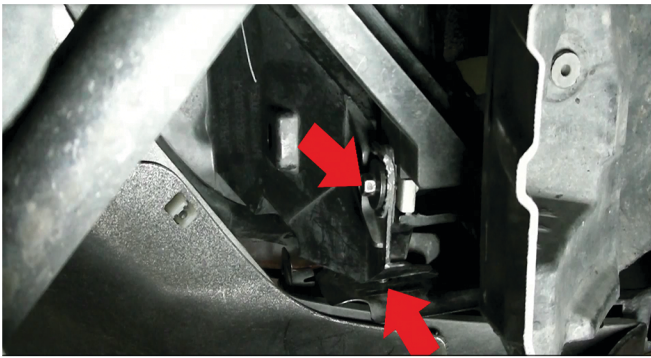


7) Remove [2x] 10mm Bolts securing the headlight. These bolts are accessible from underneath the bumper. It is an extremely tight fit so you may want to use a 10mm open-end wrench to turn the bolts.



8) Unseat the OEM headlight, remove it from the body and set it aside.



9) Remove [2x] Headlight Trim Panel retainer clips from the bottom of the OEM headlight as shown and transfer them to your new SPYDER headlight.

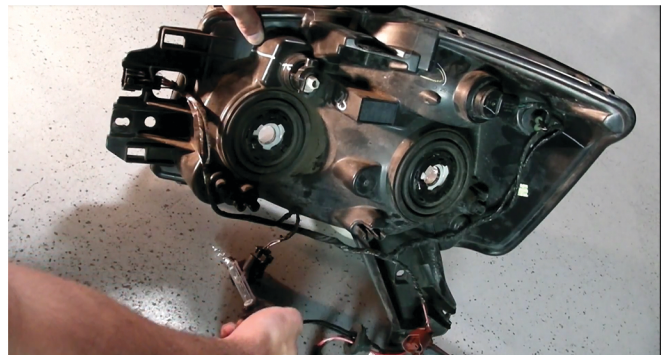

10) Remove the headlight harness and bulbs from the OEM headlight and transfer these over to your new SPYDER headlight.



11) Seat the SPYDER headlight.



12) Connect SPYDER headlight wiring harness to the truck's wiring harness.



13) Reinstall Headlight Trim Panel by pushing it gently into place, being sure to install it fully so that the trim panel is secure.



14) Reinstall the grille and reinstall the [7x] Plastic Retainers securing grille by twisting them into place using a flathead screwdriver.



For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.

<http://www.youtube.com/watch?v=xZDssWsSYCY>

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to cut down installation time for you. We have no responsibility for improper installation, if you do not know how to install, please have a professional install it.