SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

PRO-YD-CHIP06-(ALL COLORS)

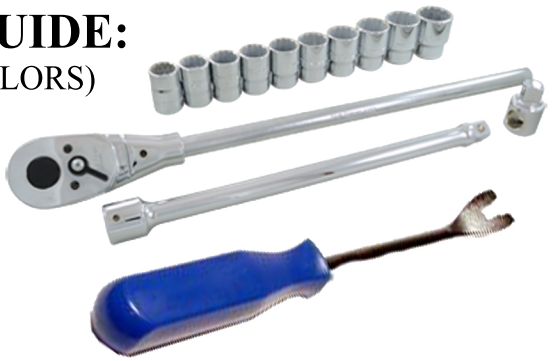

Tools Required

7mm Socket + Ratchet

Panel Popper

Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.

1) Open the hood and remove [4x] plastic retainers securing the top edge of the fascia for clearance.

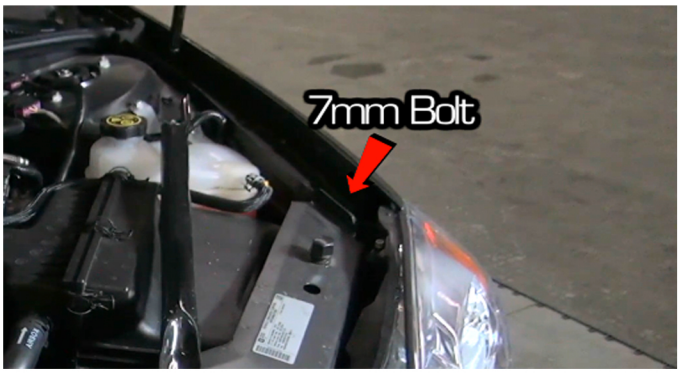

2) Remove [1x] 7mm bolt securing the corner of the headlight.

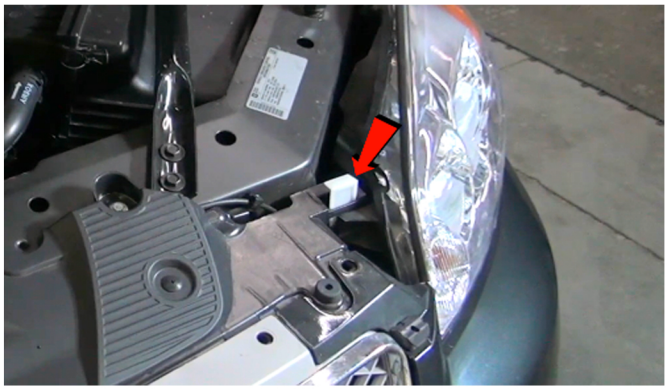

3) Remove [1x] plastic pull tab securing the headlight.

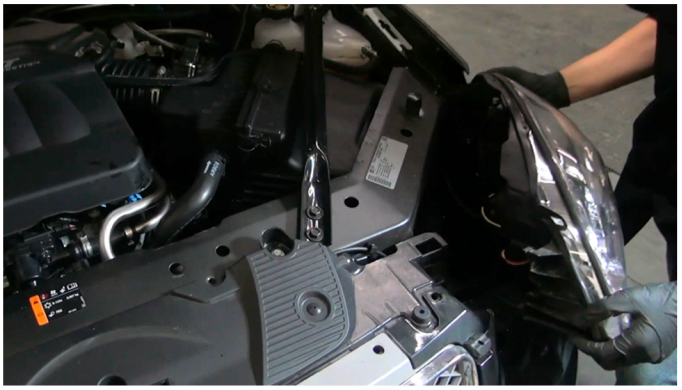

4) Unseat the headlight.

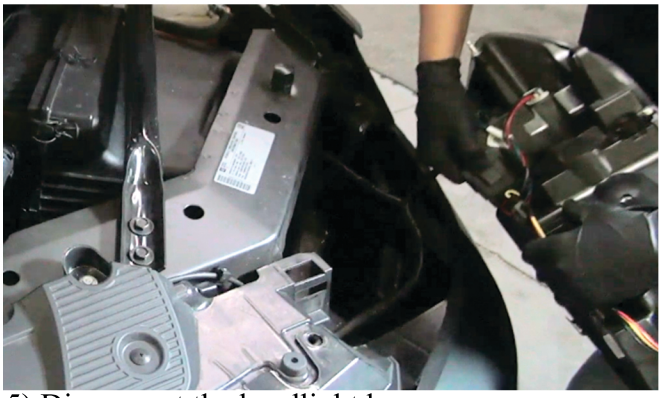

5) Disconnect the headlight harness.

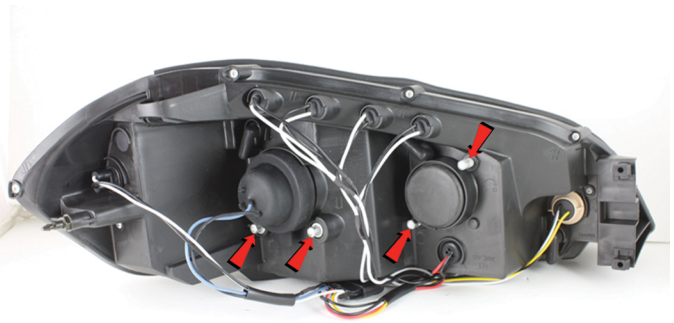

6) Your beam adjusters are marked here and are 8mm.

7) Connect the headlight harness to the Spyder headlight.

8) Seat the Spyder headlight.

9) Reinstall [1x] plastic pull tab.

10) Reinstall [1x] 7mm bolt to secure the headlight.

11) Reinstall [4x] Plastic retainers.

12) Close the hood and enjoy your new Spyder headlights.

SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
http://youtu.be/yF3vU1jkSjY

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.