SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE:

ALT-YD-TSXB03-(ALL COLORS)

Tools Required

10mm Socket wrench/ratchet

Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.

1) Open the tailgate.

2) Open the tail light access panel by releasing the two tabs.

3) Disconnect the tail light wiring harness.

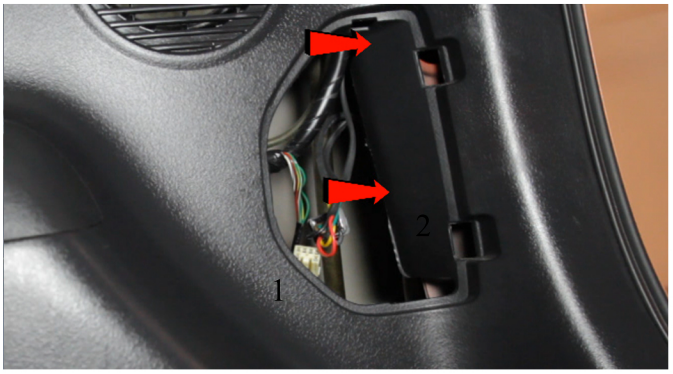

4) Remove the two 10mm bolts hidden behind the panel securing the tail light.

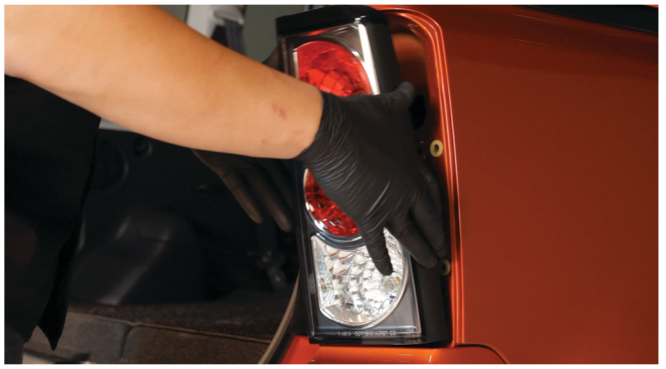

5) Unseat the OEM tail light.

6) Remove all three bulb sockets from the OEM tail light, then remove the tail light and set it aside. Never touch exposed bulbs with bare hands.

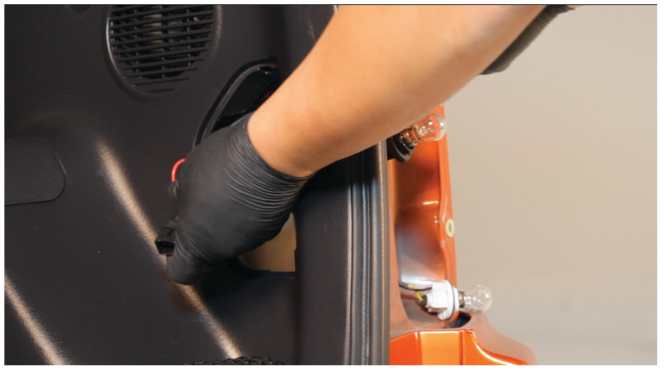

7) Remove the OEM tail light bulb harness by pulling it out through the access panel. Remove the reverse lamp bulb and turn signal bulb from their sockets.

8) Locate Spyder tail light and the reverse bulb and turn signal bulb.

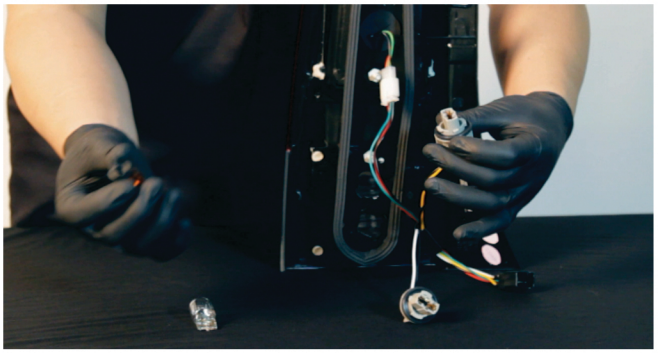

9) Transfer the turn signal bulb to the yellow and black wire bulb socket. Transfer the reverse lamp bulb to the white and black wire bulb socket. Then reinstall the sockets. Now your Spyder tail light is ready to install.

10) Feed the spyder tail light harness into the body through the bottom opening as shown, then seat the Spyder tail light.

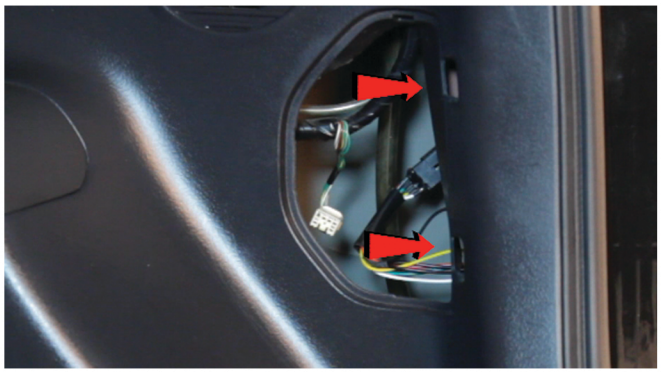

11) Reinstall [2x] 10mm/flathead bolts to secure the tail light to the body.

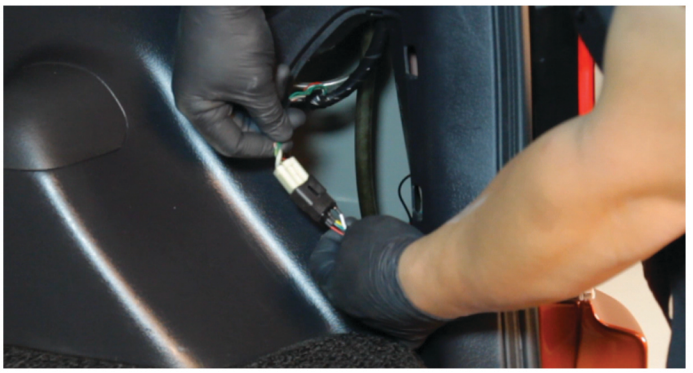

12) Connect the Spyder tail light harness to the main wiring harness.

13) Reinstall the tail light access panel.

14) Close the tailgate and enjoy your new Spyder LED tail lights!

SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video. Follow the direct link below to our YouTube channel for more information.
http://www.youtube.com/watch?v=AH6I3ddPCqs

Disclaimer

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is a guide only, designed to save you time during the installation process. We take no responsibility and cannot be held liable for improper installation. If you do not know how to install your product or are not comfortable doing it yourself, please seek professional installation.